


Cup unit



Actuator arm

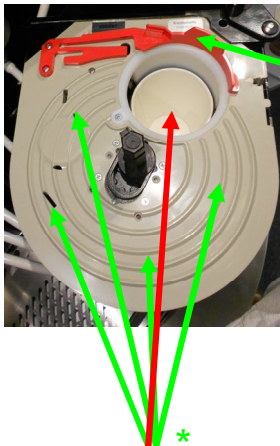

Loading cups

To correctly fill the carousel when empty:-

1. Ensure the machine is turned off.
2. Ensure the actuator arm is positioned on the outside of the cup carousel.
3. * With the door open load one sleeve of cups into the carousel tubes avoiding the dispense position highlighted with a red arrow.
4. Switch on the machine via the mains isolation switch. The carousel will then rotate until the cups drop into the dispense position cup ring.
5. Now fill the remaining columns.

IMPORTANT

DO NOT load cups into the dispense position.

DO NOT overfill the columns.

ALWAYS refit the carousel lid.

NEVER try to turn the carousel by hand as this will cause cup jams.

Cup units

There are 2 types of cup units, which can be fitted dependant on what size of cup is being used.

Cup Type	Cup Rim Diameter
9 oz	73mm
12 oz	80mm