


EASY 6000

FITTING A CARD READER

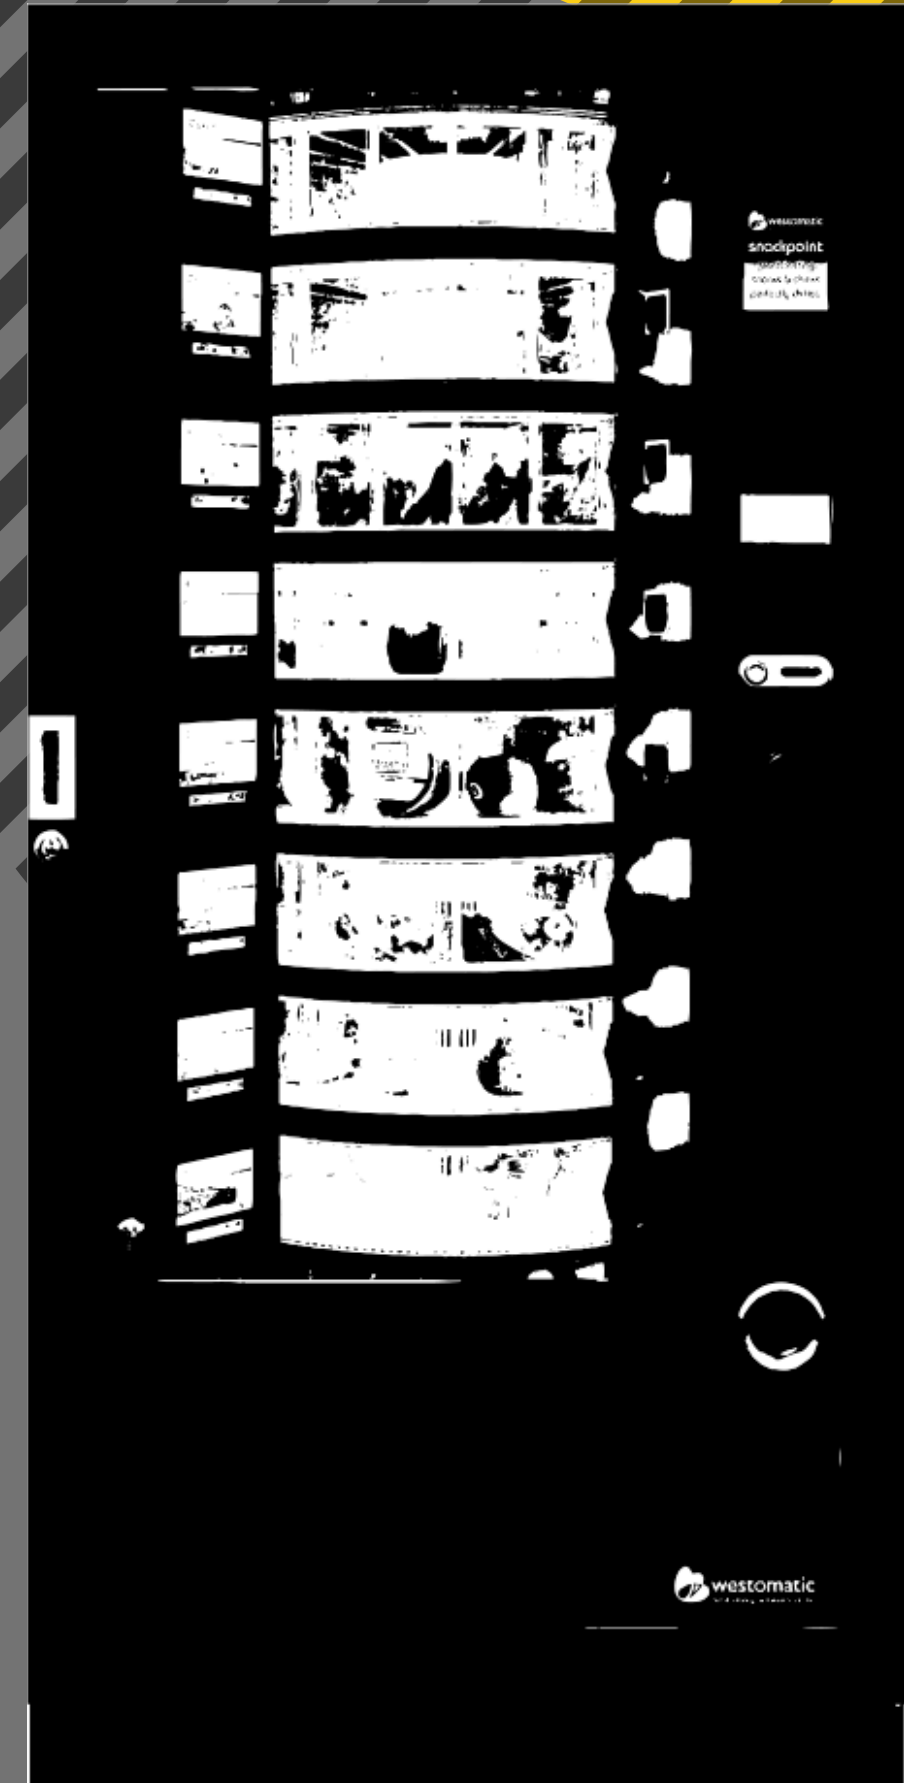

Fitting a Card Reader



In the Box:

TOOLS NEEDED:
7mm Socket




Reader



Aerial



Cover Plate

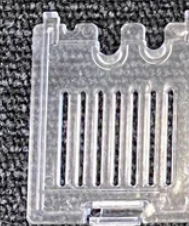

Cable





Remove blanking panel



- Fit Card reader into cut-out



Plug Cable in

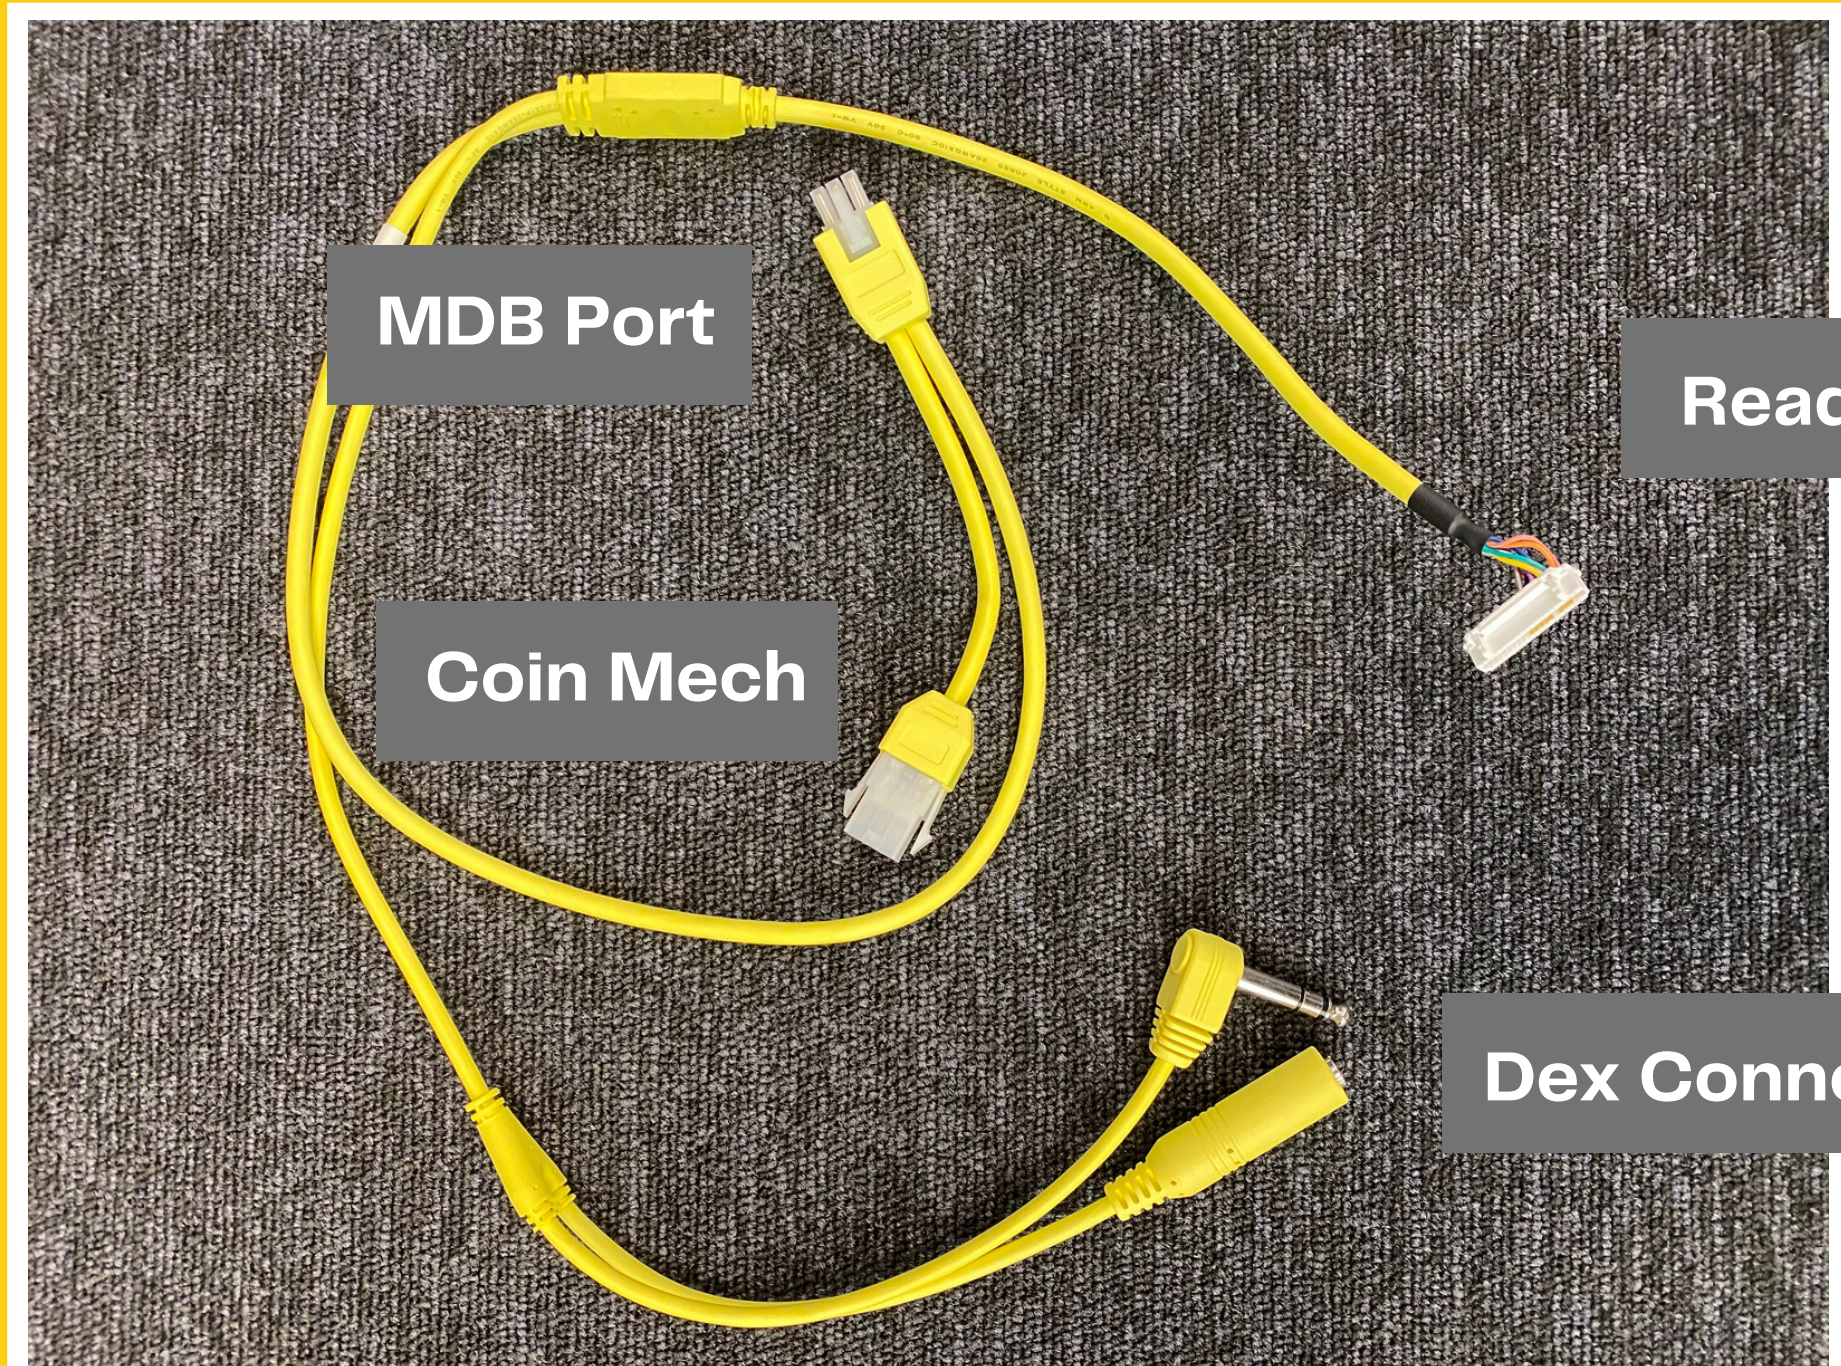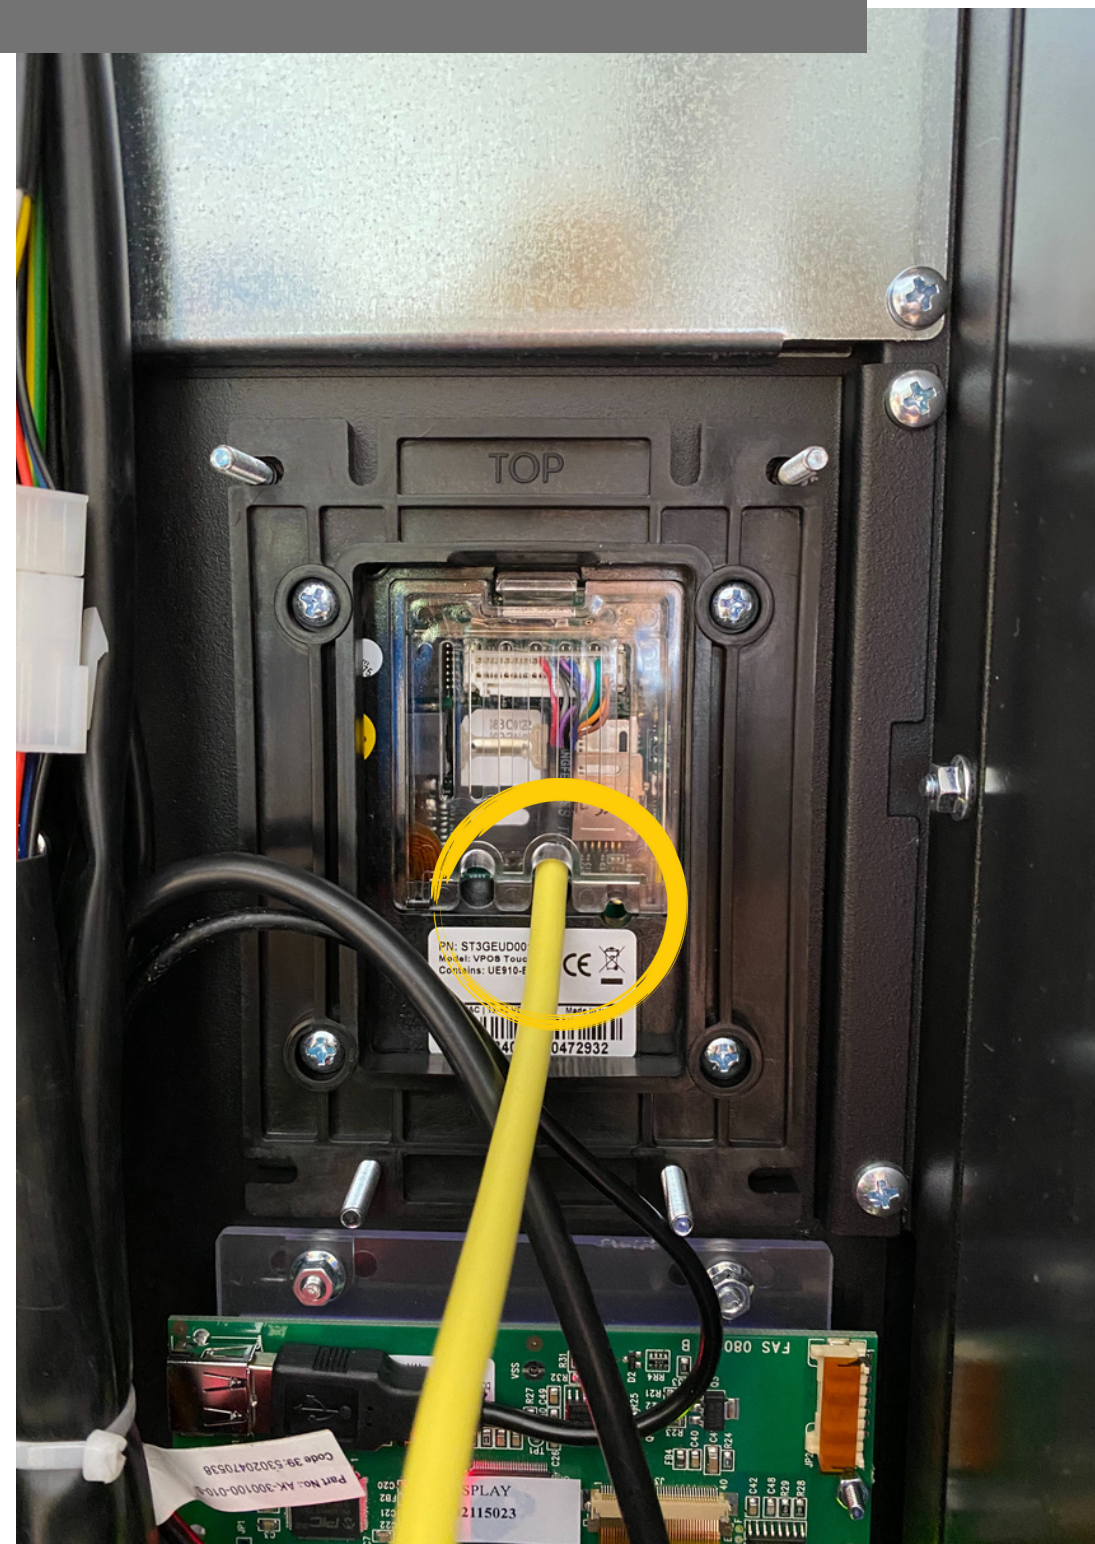

Reader

MDB Port

Coin Mech

Dex Connections

- Plug Aerial in + find a spot to attach it (may need to be moved dependant on signal)
- If coin mech fitted – connect to reader (automatically detects coin mech)



Set Reader to machine



Service Mode 1



Use Internal Keypad

= Enter


*** = Back**



Command 69
#



Scroll to MDB
#

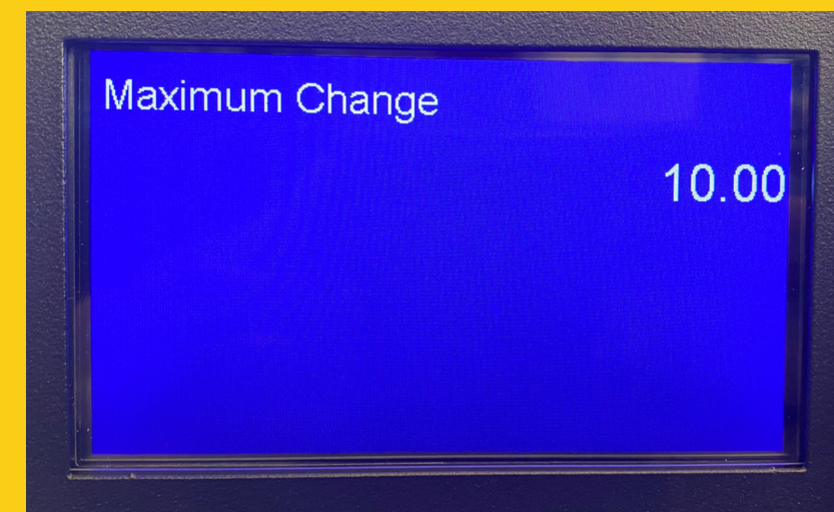

Scroll to
Max Change £10
#

(Use * to exit out)


Add a personal message to screen

CODE	CHARACTER	CODE	CHARACTER	CODE	CHARACTER
00	Cursor ahead	28	E	56	g
01	Cursor back	29	F	57	h
02	space	30	G	58	i
03	!	31	H	59	j
04	"	32	I	60	k
05	#	33	J	61	l
06	\$	34	K	62	m
07	'	35	L	63	n
08	,	36	M	64	o
09	-	37	N	65	p
10	.	38	O	66	q
11	/	39	P	67	r
12	0	40	Q	68	s
13	1	41	R	69	t
14	2	42	S	70	u
15	3	43	T	71	v
16	4	44	U	72	w
17	5	45	V	73	x
18	6	46	W	74	y
19	7	47	X	75	z
20	8	48	Y	76	å
21	9	49	Z	77	ø
22	:	50	a	78	æ
23	;	51	b	79	ä
24	A	52	c	80	ö
25	B	53	d	81	ü
26	C	54	e	82	°
27	D	55	f		



Command 95
#

Use the internal keypad to type a personal message.

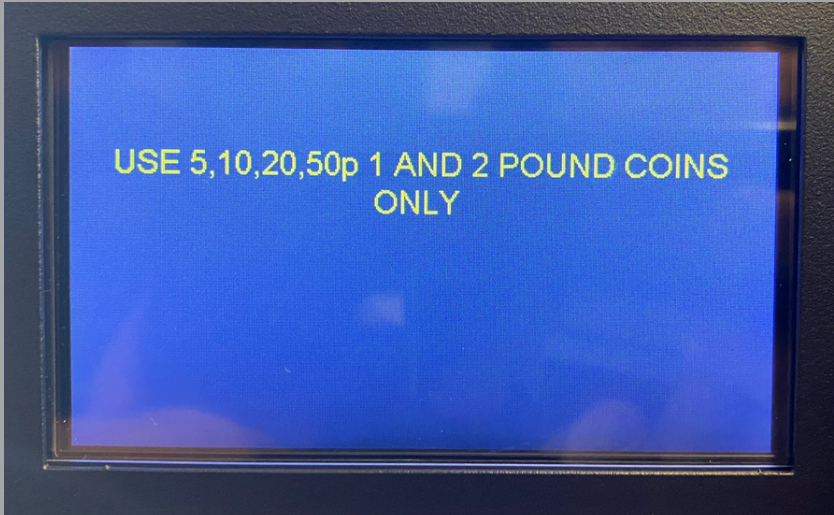

WVS For example!

(Use # to save and * to exit out)

EASY 6000

