




HYDRATION STATION

# ADJUSTING WATER DISPENSE VOLUME



westomatic  
*make it happen*

# ADJUSTING WATER DISPENSE VOLUME

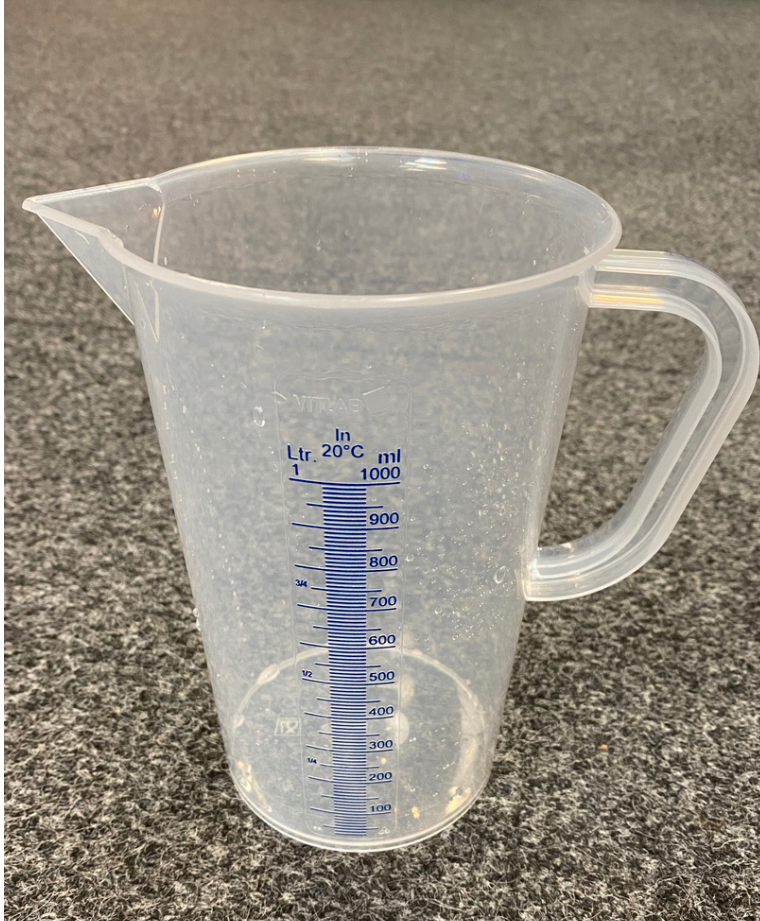


## Equipment Needed:

- Measuring Jug (Min 1 litre)

## USING THE BUTTONS


### PRE SOFTWARE UPDATE

- ① Button 1 = UP
- ② Button 2 = DOWN
- ③ Button 3 Quick = BACK  
Long = SELECT
- ✗ Button 4 = Not Used

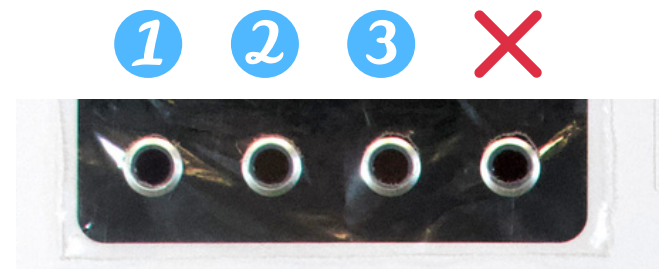

### POST SOFTWARE UPDATE

- ① Button 1 = UP
- ② Button 2 = DOWN
- ③ Button 3 = CANCEL
- ④ Button 4 = ENTER

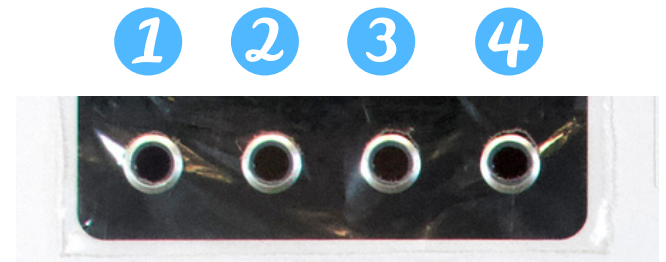

## 1 - ADJUST SETTINGS USING LCD

1



- Open Door
- In DOOR OPEN mode
- Scroll down to DRINK TESTING
- Using Button 3 - SELECT

2



- Scroll Down to BOTTLE FILL
- Using Button 3 - SELECT



3



- Scroll down to 500ml BOTTLE FILL
- Place Jug under dispense head
- Using Button 3 - SELECT
- Water will dispense into Jug

- Check the water level is correct
- Use 500ml as a benchmark
- The other volumes will adjust based on the board configuration

4



## 2- ADJUSTING WATER FILL VOLUME

1



- If the water level needs adjusting
- Dispose of water in Jug
- Use the Pressure Regulator to change water volume
- Pull cap on regulator out then turn

↻ Clockwise = INCREASES Volume

↻ Anti - Clockwise = DECREASES Volume

2



- Still using 500ml BOTTLE FILL
- Place Jug under dispense head
- Using Button 3 - SELECT
- Water will dispense into Jug

- Check the water level is correct
- Repeat steps until water level is 500ml
- All other bottle fills will be correct

3



# Water

IS LIFE - DON'T WASTE IT



## CONTACT



Westomatic Vending  
Services Ltd,  
Units 7 - 8 Forde Court,  
Block 4 Forde Road,  
Newton Abbot,  
TQ12 4BT



+44 (0)1626 323100



[sales@westomatic.com](mailto:sales@westomatic.com)



[www.westomatic.com](http://www.westomatic.com)