



HYDRATION STATION

# INSTALLING SCREEN MEDIA



westomatic  
*make it happen*

# INSTALLING SCREEN MEDIA



SETTINGS BUTTONS

DIGITAL MEDIA SCREEN

USB/SD CARD SLOT

## LOADING FILES ONTO SD CARD



- We recommend using an SD Card to show media on the screen of the H20
- Remove the SD Card from the media screen
- Using a computer, read the contents of the SD card
- Delete all files currently on the SD Card (if there are any)

## LOADING FILES ONTO SD CARD

### **Load your media:**

For stock footage please use the following link [H2O-Screen-Media.zip](#) and copy the files onto the SD card

**REFILL  
DONT KILL!  
REDUCE PLASTIC WASTE**



Alternatively you can create your own using the following settings:

### **File Formats:**

Image: PNG, JPG

Video: MP4


**Frame Width x Height:** 1280 x 720

**Frame Rate:** 30fps

Once created, please load onto the SD card

## LOADING ONTO MACHINE

- Using the buttons on the back of the screen, highlight the 'SETTINGS' option and press 'ENTER' to select it
- Using the directional buttons again change the 'AUTOPLAY' options to your desired setting. i.e. 'movie' or 'photo' or 'photo & movie' should your screen have this option.
- Press **'MENU'** to save the settings
- Insert SD card back into digital media screen (as shown in the image)
- Files on the SD Card will automatically play and continually rotate the media on the card.
- The screen does have sound - to adjust it please use the remote control supplied.

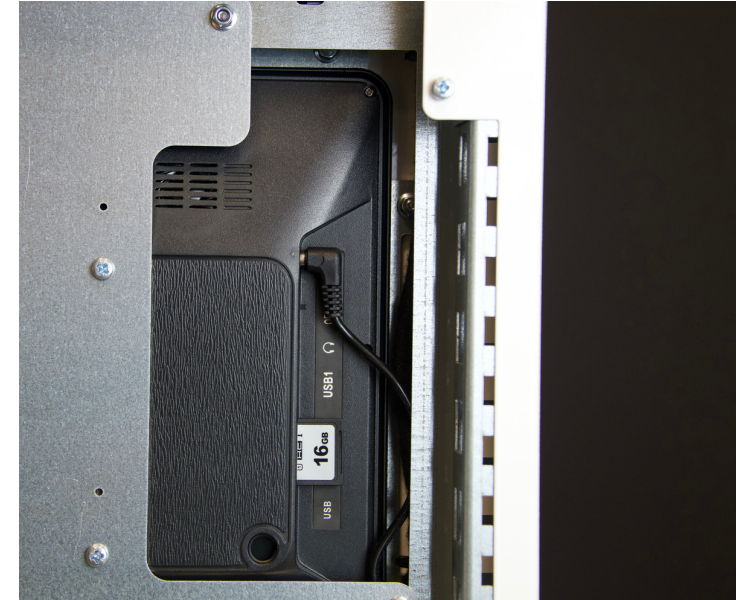



# Water

IS LIFE - DON'T WASTE IT



## CONTACT



Westomatic Vending  
Services Ltd,  
Units 7 - 8 Forde Court,  
Block 4 Forde Road,  
Newton Abbot,  
TQ12 4BT



+44 (0)1626 323100



[sales@westomatic.com](mailto:sales@westomatic.com)



[www.westomatic.com](http://www.westomatic.com)