



HYDRATION STATION

# CHANGE BOTTLE SENSITIVITY



westomatic  
*make it happen*

# CHANGE BOTTLE SENSITIVITY




## Equipment Needed:

- Mini Flathead screwdriver

## 1 - DOOR OPEN PIN

- Open the door
- Pull the pin out to operate as if the door was closed

1

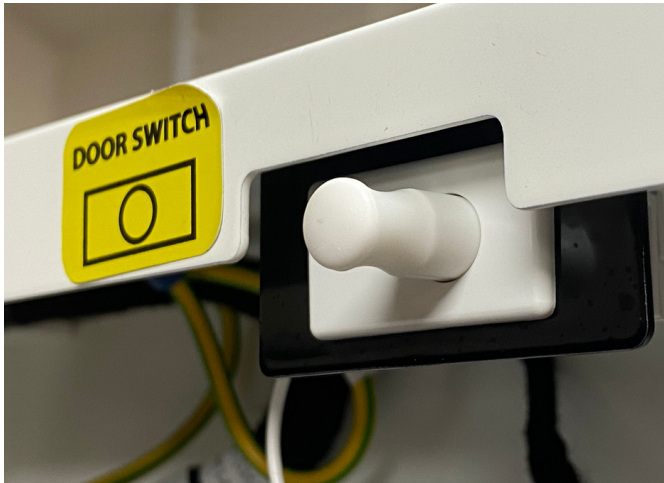

Pin In

2



Pin Out

## 2 - LOCATE BOTTLE SENSOR


**SENSOR**



**BOTTLE STATION**



### 3 - CHANGING SENSITIVITY

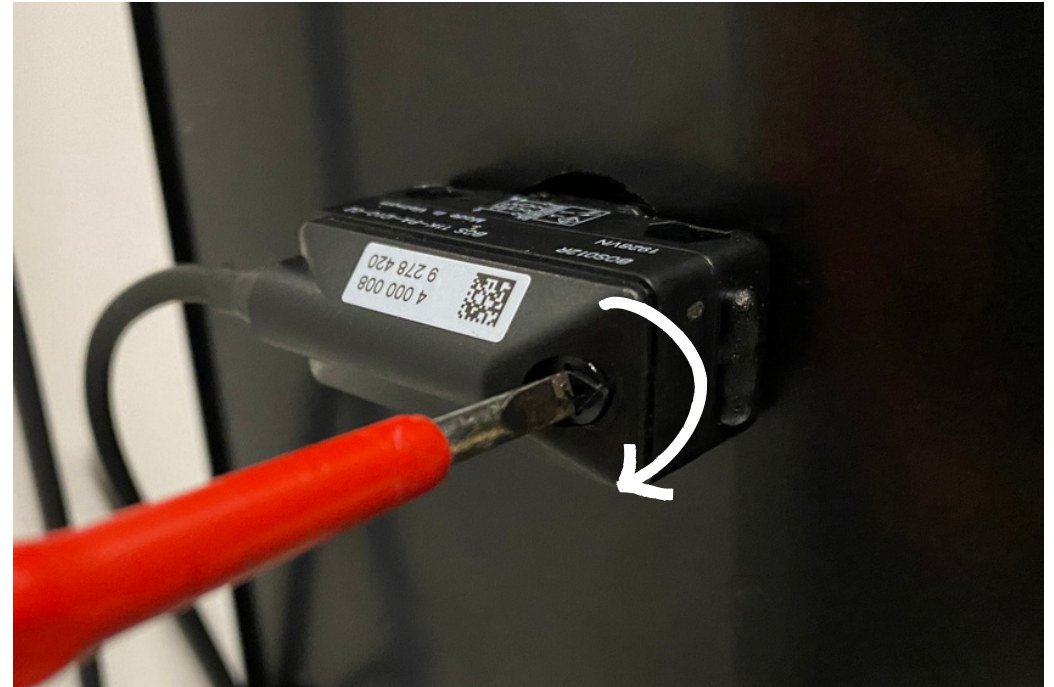


- Clockwise increases sensitivity
- Anti- Clockwise decreases sensitivity

## 4 - CHANGING SENSITIVITY

- Place a bottle in the Bottle Dispense Area
- Green Light ONLY - No bottle detected
- Green & Orange Light - Bottle detected

Note: At standby, and when Bottle is in place, the Orange light must not flicker/flash. If flickering without a bottle in place, the sensitivity needs to be reduced. If flickering with bottle in place, sensitivity requires to be slightly increased.

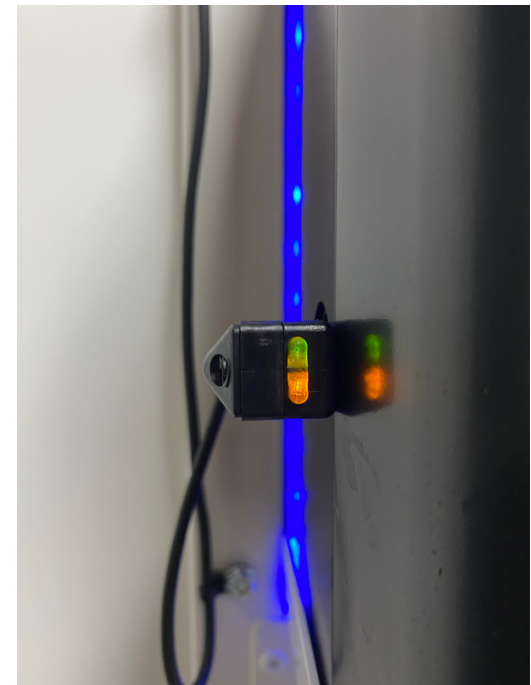

## 5 -TEST DRINK

- Once adjusted - test your drinks
- Place bottle in dispense area
- Display should read - YOUR BOTTLE HAS BEEN DETECTED
- Display will read MAKE YOUR SELECTION when there is NO bottle detected



# Water

IS LIFE - DON'T WASTE IT



## CONTACT



Westomatic Vending  
Services Ltd,  
Units 7 - 8 Forde Court,  
Block 4 Forde Road,  
Newton Abbot,  
TQ12 4BT



British Vending Excellence Since 1964



+44 (0)1626 323100



[sales@westomatic.com](mailto:sales@westomatic.com)



[www.westomatic.com](http://www.westomatic.com)