



# Elevate

**12 MONTH CHECK UP!**

westomatic  
*make it happen*

# Elevate

## 12 month Check up!

### Key areas to look at:

#### HOUSING

##### The Cabinet & Door -

- Test fixings and machine stability
- Test door open / close smoothly
- Clean Cabinet and door
- Lubricate the bearing studs at top and bottom of glass door
- Lubricate the locking hook
- Test the delivery flap spring / seal / locking function

#### REFRIGERATION UNIT

##### The Refrigeration Unit -

- Clean lint filter under the drawer
- Clean condensor
- Clean compressor
- Clean evaporation tray
- Clean / Test / Lubricate the connection gaskets

#### GLASS DOOR

##### The Glass Door -

- Clean the insulating glass pane
- Test and Lubricate the door gasket
- Test and Lubricate the lock bearing studs
- Test and Lubricate the lock

#### ILLUMINATION

##### Internal Lighting -

- Test LED function
- Test swing function - left light strip
- Test the lighting cables - upper left

TEST & CLEAN!

# Elevate



## 12 month Check up!

<b>MACHINE</b>	<p>Control boards / Payment -</p> <ul style="list-style-type: none"><li>• Test the PCB Control board</li><li>• Clean and Test the coin mechanism</li><li>• Test the coin return mechanism</li><li>• Clean the Selection keypad</li><li>• Clean the display LCD</li><li>• Clean the product retrieval unit</li><li>• Test the lifting force is at least 250g</li></ul>	TEST & CLEAN!
<b>PRODUCT SHELVES</b>	<p>Product Shelves and motors-</p> <ul style="list-style-type: none"><li>• Test catching function of the product shelf</li><li>• Clean and Test the inside of product shelf</li><li>• Test product pusher, position of belt in the pusher, front wheel drive</li><li>• Lubricate front drive wheel bearing</li><li>• Test hooking-in position of the pendulum hook</li><li>• Check legibility of the price/selection labels</li><li>• Clean and lubricate the horizontal linear rail</li><li>• Clean the guide rail below</li><li>• Check any damage to the toothed belts, drive belt or toothed wheel pendulum</li><li>• Lubricate the gear motor and upper shaft bearing</li><li>• Check stop positions of selections 10, 18, 30, 38, 50, 58.</li></ul>	

# Elevate



## Safety Checks:

- **PAT test machine** - Insulation & Earth Bond only
- **Check Mains Lead** - for damage/do not connect to extension lead
- **Check Fuses** -correct value and type
- **Check Looms** - connections are free from damage and fully secured

## Tools Required



PAT Tester  
Portable Hoover  
LED Strip Lights (if required)  
Lubricant  
Rinsing water



Estimated Labour Time - 1hrs