

primo

MINI/MIDI

DAILY CLEANING

westomatic
make it happen



USING THE MACHINE

These instructions show the steps for DAILY cleaning of the Primo Mini/Midi:

- Cleaning the mixers
- Clean the drip tray and cup tray



1 

Select the menu
of the machine
If menu not
visible - unlock
door



2

Select rinse
machine



3

Make sure the
door is locked



4

Place container
under outlet.
Press next to
start the rinse
cycle



5

Wait while the
system rinses -
approx 3
minutes



6

Remove the
container - and
press Next to
continue and
finish



7

Remove cup tray grill



8

Remove drip tray - remove hose if connected to waste water pipe



9

Remove drip tray grill



10

Clean the drip tray and grill using mild detergent.



11

Ensure both parts are thoroughly dried.



12

Wipe clean the back splash and the cup tray



13

Replace cup tray
grill



14

Replace the drip
tray and grill



15

Remove drip
tray grill





CONTACT



Westomatic Vending
Services Ltd,
Units 7 - 8 Forde Court,
Block 4 Forde Road,
Newton Abbot,
TQ12 4BT

primo



+44 (0)1626 323100



sales@westomatic.com



www.westomatic.com