

primo

MINI/MIDI

DISPLAY & SOUND

westomatic
make it happen



OPERATOR MENU

You can customise your machine to suit your requirements using the operator menu





On the machine
select the menu
- if the menu is
not visible unlock
the machine



Select Operator
Menu



Enter the Pin
Code:
11111



The following
options are
available:



1. Payment Options
2. Date and Time
3. Day Counter Drinks
4. Quick Recipe
- 5. Display and Sound**
6. Change PIN Code
7. Energy Save Mode
99. Service Menu

Select Back to leave the
operator menu.

5.DISPLAY & SOUND

You can customise your machine to suit your requirements using the operator menu -

Selection 5 allows you to adjust the display and sound. Here you can customise your own advertising media during standby and preparation.

IMAGE SCREENSAVER =
600x1024pixels; 8 bit; png;
transparent.

LOGO ON CUP = 145x145pixels;
8 bit; png; transparent.

LOGO ON CUP, SCREENSAVER =
225x225pixels; 8 bit; png;
transparent.



1

Select Option 5 -
DISPLAY &
SOUND



2

The following
settings are
adjustable:



3

1. Advertising Screen
2. Sound and Display
3. Logo on Cup
4. Show Repeat Recipe
5. Show Allergens Info
6. Cup Sensor
7. Free Menu Access

4

1 - ADVERTISING
SCREEN - 1- IDLE.
Here you can
customise your
idle screen to
your needs.



5

Select
SCREENSAVER
during standby.
(See next slide
for options)



6

SAVE the settings
once you are
happy.
BACK to leave
the menu.



4



5



Select SCREENSAVER during standby.

- NO SCREENSAVER - recipe overview always visible
- DEFAULT SCREENSAVER - cup
- IMAGE OR SLIDE - show one or more images as a slideshow

Options to customise screensaver:

- SCREENSAVER DELAY TIME - time after which image or screensaver will start
- SHOW TEXT - machine will show text layer "Touch Screen to Activate"
- SHOW TOUCH SYMBOL - machine will show layer "Touch Symbol"
- SELECT IMAGE - select here the image for the screensaver

Options to customise slideshow:

- EFFECT DURATION TIME - time of fade in (0.5-3secs)
- DURATION TIME - time between images (0.5-3secs)

7

Select SELECT IMAGES to select images for idle screen.



8

NAME to preview. Select Images for idle screen. Use arrows for order of display.



9

SAVE to save settings, BACK to exit.



10

2-RECIPE PREPARATION. Customise screen during preparation.



11

Customise your screen during recipe preparation to suit your requirements



12

SAVE the settings once you are happy. BACK to leave the menu.



10



Select SCREENSAVER during preparation.

- NO SCREENSAVER - progress circle always visible
- IMAGE OR SLIDE - show one or more images as a slideshow

Options to customise screen during preparation:

- STOP BUTTON - show stop button as a layer during preparation
- PROGRESS CIRCLE - show progress circle as a layer during preparation
- SELECT IMAGE - select here the image for the screensaver

11



Options to customise slideshow:

- Select SLIDE or FADE IN
- EFFECT DURATION TIME - time of fade in (0.5-3secs)
- DURATION TIME - time between images (0.5-3secs)

13

Select SELECT IMAGE to select images used during preparation



14

NAME to preview. Select Images for preparation screen. Use arrows for order of display.



15

SAVE to save settings, BACK to exit.




16

3 - LOAD IMAGES FROM SD CARD. Can display your own images.



17

images must be organised in the correct file format on SD card.

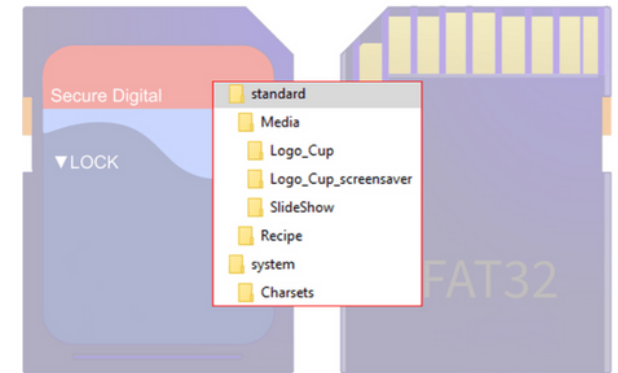


18

Insert the SD card into the machine.



19

Tap for Preview.
Select FILES you
want, SAVE to
save, BACK to
exit menu.

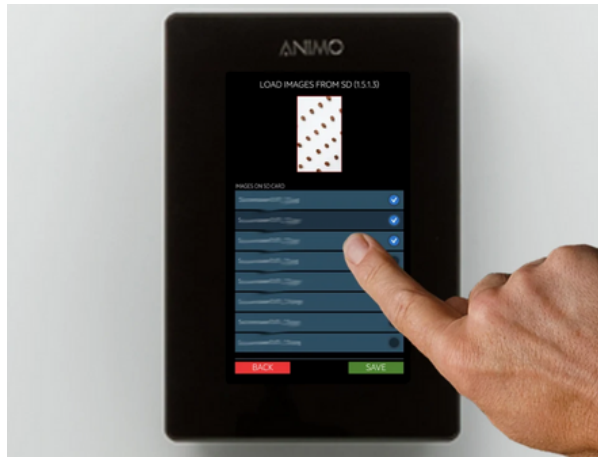


20

4 - REMOVE
IMAGE. Images
can easily be
deleted from
machine.



21

Select FILES,
Select REMOVE,
Select BACK.

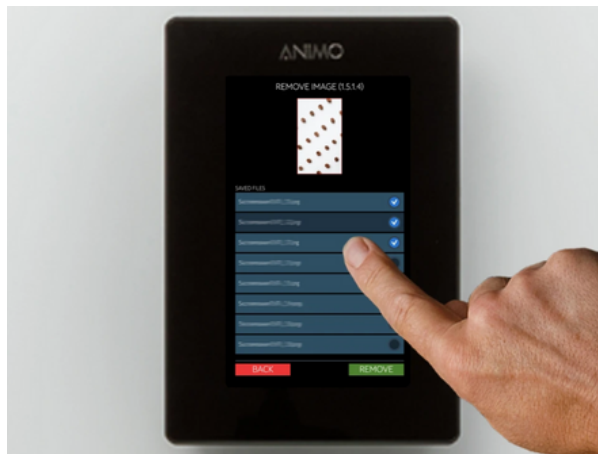

22

Operator menu -
Select 2 - SOUND
AND DISPLAY.



23

Here you can
customise
volume,
brightness and
background colour



24

SOUND - + or -
to change (0-
100%)
BRIGHTNESS - +
or - to change
(25 - 100%)



25

SAVE the settings once you are happy.
BACK to leave the menu.



26

Select colour and
SAVE settings



27

3 - LOGO ON CUP -
- customise the
logo shown. Tap
to turn on/off, tap
to display options



28

LOGO ON CUP -
during
preparation.
LOGO ON
SCREENSAVER -
assign logo to cup




29

LOAD LOGO
FROM SD - card
REMOVE LOGO



30

LOGO ON CUP -
select the image
to be displayed,
SAVE, then BACK
to exit

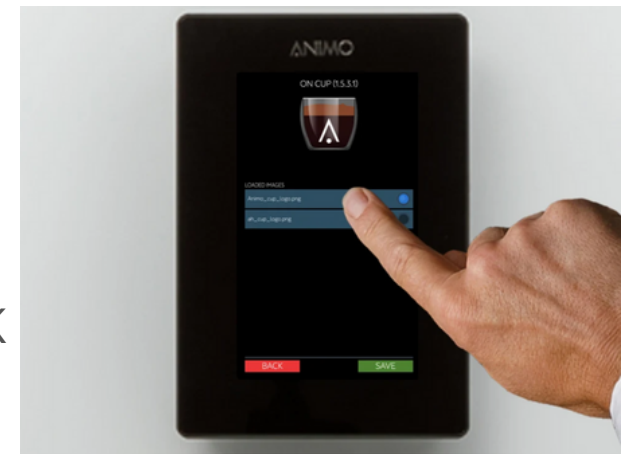

31

ON SCREENSAVER
- assign logo to
cup of
screensaver



32

Select logo from
images, SAVE,
then BACK to
exit




33

LOAD LOGO
FROM SD -
upload from
your own images
on SD card



34

Media must be
in the file
structure shown.

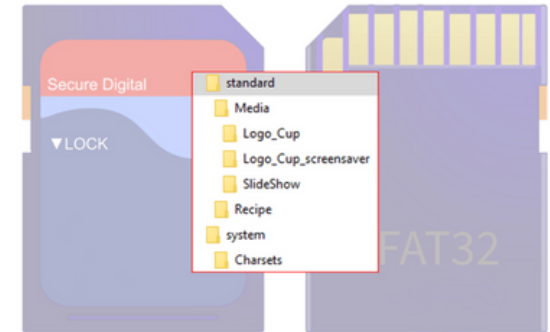


35

Insert SD card
into machine.



36

Tap for Preview.
Select FILES you
want, SAVE to
save, BACK to
exit menu.

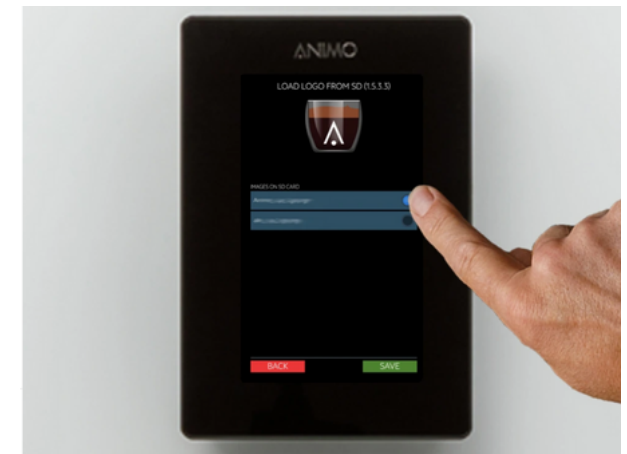

37

REMOVE LOGO -
logos can be
easily deleted
from the
machine.



38

Select the logos
to remove. Select
REMOVE, select
BACK to exit.



39

4 - REPEAT RECIPE
- quick dispensing
of same recipe.
Tap to switch
On/Off. Select
SAVE, BACK.



41

5 - SHOW
ALLERGENS INFO
- tap to switch
On/Off, SAVE,
BACK to exit.



42

6 - CUP SENSORS
- tap to switch
On/Off, SAVE,
BACK to exit.



43

6 - FREE MENU
ACCESS - shown
on operator
screen. Tap to
switch On/Off,
SAVE, BACK.





CONTACT



Westomatic Vending
Services Ltd,
Units 7 - 8 Forde Court,
Block 4 Forde Road,
Newton Abbot,
TQ12 4BT

prigo



+44 (0)1626 323100



sales@westomatic.com



www.westomatic.com