

primo

MINI/MIDI

OPERATOR MENU

westomatic
make it happen



OPERATOR MENU

You can customise your machine to suit your requirements using the operator menu





On the machine
select the menu
- if the menu is
not visible unlock
the machine



Select Operator
Menu



Enter the Pin
Code:
11111



The following
options are
available:



1. Payment Options
2. Date and Time
3. Day Counter Drinks
4. Quick Recipe
5. Display and Sound
6. Change PIN Code
7. Energy Save Mode
99. Service Menu

Select Back to leave the
operator menu.

1.PAYMENT OPTIONS

You can customise your machine to suit your requirements using the operator menu -

Selection 1 can customise payment options.



1

Select Option 1 - Payment options
Tap between L & R to switch on/off, press to enter options



2

FREE = payment system is off.
PAID = Cups /Duration - free dispense for certain time/cups



3

CUPS = free dispensing of certain number of cups



4

Choose number of cups (1-10) for free dispense after activation of FREE VEND



5

TIME = free dispensing for a certain amount of time



6

Choose Duration Time (1-15mins) for free dispense after activation of FREE VEND



7

Select SAVE to save settings.
Select BACK to leave the menu



8

The machine will confirm that the parameters have been updated.
Press OK.



2.DATE AND TIME

You can customise your machine to suit your requirements using the operator menu -

Selection 2 allows you to alter the time and date. It also allows you to set time blocks for certain pricing schedules - for example the machine entering FREEVEND at a certain time of the day.



1

Select Option 2 -
Date & Time
Options are:

- CLOCK
- SWITCHING TIMES



2

CLOCK - Changes
the time and
date



3

Change Time or
Date with the +
or - buttons.
SAVE to save
settings
BACK to exit



4

SWITCHING
TIMES - if you
have payment
systems set up
you can set price
timescales here



5

You can select 3
blocks per day.
Choose DAY (< >)
to select the first
block



6

Select SWITCH
ON time for
block 1. Alter
with + or - .



7

Select SWITCH OFF time for block 1. Alter with + or -.



10

You can set:
PRICE HIGH
PRICE LOW
FREE
per time block



8

Repeat for Blocks 2 and 3 if required.
Machine will enter Standby outside set times



11

Select SAVE to save the new settings.
Select BACK to exit menu



9

If payment system is activated machine can set prices per block. Switch PRICE POLICY on



12

The machine will confirm that the parameters have been updated. Press OK.



3.DAY COUNTER RECIPES

You can customise your machine to suit your requirements using the operator menu -

Selection 3 allows you to see the daily counters per drink. Can be set up to show by drink size too - Small/Normal/Large drinks.



1

Select Option 3 - Day Counter Recipes.



2

Scroll through to see all drink selections - tap on drink to hide the drink counter per recipe.



3

Tap on the SIZE to see all the options.



4

Select BACK to leave the menu



4. QUICK RECIPE

You can customise your machine to suit your requirements using the operator menu -

Selection 4 allows you to customise your drink settings. Here you can customise the quantity of ingredients (%) and the volume of water (ml).



1

Select Option 4 -
QUICK RECIPE



2

Select the drink
you want to
adjust.



3

Adjust the
amount of
ingredient by %
(-20% to +20%)
by tapping + or -
buttons.



4

Adjust the cup
volume in ml (2-
to 350ml) by
tapping the + or -
buttons.



5

Place a cup
under the outlet
and TEST the
drinks - repeat
until satisfied.



6

SAVE the settings
once you are
happy.
BACK to leave
the menu.



5.DISPLAY & SOUND

You can customise your machine to suit your requirements using the operator menu -

Selection 5 allows you to adjust the display and sound. Here you can customise your own advertising media during standby and preparation.

IMAGE SCREENSAVER =
600x1024pixels; 8 bit; png;
transparent.

LOGO ON CUP = 145x145pixels;
8 bit; png; transparent.

LOGO ON CUP, SCREENSAVER =
225x225pixels; 8 bit; png;
transparent.



1

Select Option 5 -
DISPLAY &
SOUND



2

The following
settings are
adjustable:



3

1. Advertising Screen
2. Sound and Display
3. Logo on Cup
4. Show Repeat Recipe
5. Show Allergens Info
6. Cup Sensor
7. Free Menu Access

4

1 - ADVERTISING
SCREEN - 1- IDLE.
Here you can
customise your
idle screen to
your needs.



5

Select
SCREENSAVER
during standby.
(See next slide
for options)



6

SAVE the settings
once you are
happy.
BACK to leave
the menu.



4



5



Select SCREENSAVER during standby.

- NO SCREENSAVER - recipe overview always visible
- DEFAULT SCREENSAVER - cup
- IMAGE OR SLIDE - show one or more images as a slideshow

Options to customise screensaver:

- SCREENSAVER DELAY TIME - time after which image or screensaver will start
- SHOW TEXT - machine will show text layer "Touch Screen to Activate"
- SHOW TOUCH SYMBOL - machine will show layer "Touch Symbol"
- SELECT IMAGE - select here the image for the screensaver

Options to customise slideshow:

- EFFECT DURATION TIME - time of fade in (0.5-3secs)
- DURATION TIME - time between images (0.5-3secs)

7

Select SELECT IMAGES to select images for idle screen.



8

NAME to preview. Select Images for idle screen. Use arrows for order of display.



9

SAVE to save settings, BACK to exit.



10

2-RECIPE PREPARATION. Customise screen during preparation.



11

Customise your screen during recipe preparation to suit your requirements



12

SAVE the settings once you are happy. BACK to leave the menu.



10



Select SCREENSAVER during preparation.

- NO SCREENSAVER - progress circle always visible
- IMAGE OR SLIDE - show one or more images as a slideshow

Options to customise screen during preparation:

- STOP BUTTON - show stop button as a layer during preparation
- PROGRESS CIRCLE - show progress circle as a layer during preparation
- SELECT IMAGE - select here the image for the screensaver

11



Options to customise slideshow:

- Select SLIDE or FADE IN
- EFFECT DURATION TIME - time of fade in (0.5-3secs)
- DURATION TIME - time between images (0.5-3secs)

13

Select SELECT IMAGE to select images used during preparation



14

NAME to preview. Select Images for preparation screen. Use arrows for order of display.



15

SAVE to save settings, BACK to exit.



 
16

3 - LOAD IMAGES FROM SD CARD. Can display your own images.



17

images must be organised in the correct file format on SD card.

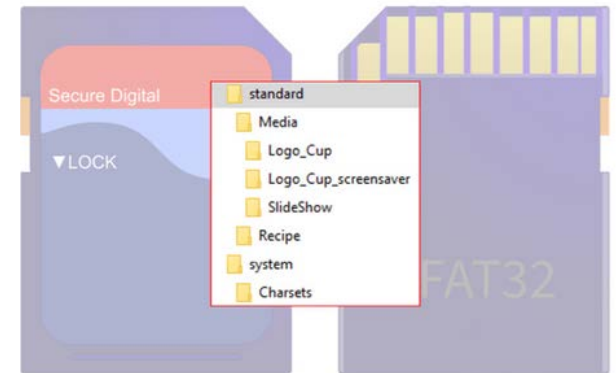

18

Insert the SD card into the machine.



19

Tap for Preview.
Select FILES you
want, SAVE to
save, BACK to
exit menu.



20

4 - REMOVE
IMAGE. Images
can easily be
deleted from
machine.



21

Select FILES,
Select REMOVE,
Select BACK.



22

Operator menu -
Select 2 - SOUND
AND DISPLAY.



23

Here you can
customise
volume,
brightness and
background colour



24

SOUND - + or -
to change (0-
100%)
BRIGHTNESS - +
or - to change
(25 - 100%)



25

SAVE the settings once you are happy.
BACK to leave the menu.



26

Select colour and
SAVE settings



27

3 - LOGO ON CUP -
- customise the logo shown. Tap to turn on/off, tap to display options



28

LOGO ON CUP -
during preparation.
LOGO ON
SCREENSAVER -
assign logo to cup



29

LOAD LOGO
FROM SD - card
REMOVE LOGO



30

LOGO ON CUP -
select the image to be displayed,
SAVE, then BACK to exit



31

ON SCREENSAVER
- assign logo to
cup of
screensaver



32

Select logo from
images, SAVE,
then BACK to
exit



 
33

LOAD LOGO
FROM SD -
upload from
your own images
on SD card



34

Media must be
in the file
structure shown.

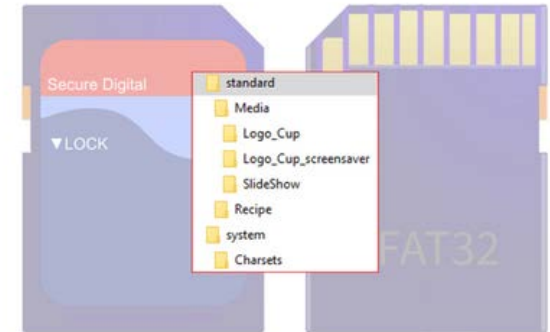

35

Insert SD card
into machine.



36

Tap for Preview.
Select FILES you
want, SAVE to
save, BACK to
exit menu.



37

REMOVE LOGO -
logos can be
easily deleted
from the
machine.



38

Select the logos
to remove. Select
REMOVE, select
BACK to exit.



39

4 - REPEAT RECIPE
- quick dispensing
of same recipe.
Tap to switch
On/Off. Select
SAVE, BACK.



41

5 - SHOW
ALLERGENS INFO
- tap to switch
On/Off, SAVE,
BACK to exit.



42

6 - CUP SENSORS
- tap to switch
On/Off, SAVE,
BACK to exit.



43

6 - FREE MENU
ACCESS - shown
on operator
screen. Tap to
switch On/Off,
SAVE, BACK.



6.CHANGE PIN CODES

You can customise your machine to suit your requirements using the operator menu -

Selection 6 allows you to change the following pin codes:

- Operator Pin
- Free Vend Pin
- RELEASE PIN - access to recipe overview



1

Select Option 6 -
CHANGE PIN
CODES



2

Select the pin
you want to
change.



3

Enter the new
PIN CODE



4

Repeat the new
PIN CODE



5

Select SAVE, then
BACK to exit, and
repeat for other
pin codes.



6

The machine will
confirm that the
parameters have
been updated.
Press OK.



7.ENERGY SAVE MODE

You can customise your machine to suit your requirements using the operator menu -

Selection 7 allows you to customise the Energy Save Mode to your requirements.

The machine uses less energy in ESM. The ESM activates after a set time after dispensing the last drink. The temperature of the boiler drops until the set temperature.



1

Select Option 7 -
ENERGY SAVE
MODE



2

TIME - before
ESM activates
BOILER TEMP -
during ESM
BACKLIGHT -
during ESM



3

TIME - 15-240
mins. Use + or -
to set the time to
activate ENERGY
SAVE MODE



4

BOILER TEMP -
OFF/60-80°C.
The lower the
temp the longer
before machine
can make drinks.



5

BACKLIGHT -
ON - Standby
logo during ESM
OFF - black
screen during
ESM



6

SAVE the
settings, then
BACK to exit.



7

The machine will confirm that the parameters have been updated. Press OK.



99.SERVICE MENU

You can customise your machine to suit your requirements using the operator menu -

Selection 99 is a higher level service menu, only accessible by the service engineer.





CONTACT



Westomatic Vending
Services Ltd,
Units 7 - 8 Forde Court,
Block 4 Forde Road,
Newton Abbot,
TQ12 4BT

primo



westomatic
British Vending Excellence Since 1964



+44 (0)1626 323100



sales@westomatic.com



www.westomatic.com