



Encore

PROCESSOR BOARD EXCHANGE



westomatic
make it happen



Replacing the Processor Board

When fitting this replacement Eco Encore Processor Board (PN 1042003), at first power-up the machines display *may* indicate 'OUT OF SERVICE'. If this is the case, follow these instructions to re-boot the control board.

1. With the machine door open, press 017192 on the external keypad. Note: the numbers will not appear on the LCD Display.
2. Press the 'VEND' key to enter.
3. The Display will not indicate 'FORCE OUT OF SERVICE ACTIVE/INACTIVE'
4. Using the 'Extra White' and/or 'Whipped' keys, toggle the message to display 'INACTIVE'.
5. Press the 'VEND' key to accept.
6. The display will now show the 'DOOR OPEN' message.

To program the board for the correct machine type, you need to access address 001 to program the correct machine type. The default setting for the board is a multi-choice Instant machine. To re-program to a different machine type follow these instructions:

1. With the machine door open and Display indicating 'DOOR OPEN', press 861594 on the external keypad. Note: the numbers will not appear on the LCD Display.
2. Press the 'VEND' key to enter. You should hear an extended bleep from the board.
3. Enter Service mode by pressing the 'CANCEL' key four times.
4. Enter 001 and press the 'VEND' key to accept.
5. The display will show the current setting of address 001 which will be 3.
6. Press the 'VEND' key, the data setting will now flash. Press the relevant numbered key to select the correct machine type as follows:

Encore



3 = ENCORE LX / ECO ENCORE INSTANT - MULTI CHOICE

4 = ENCORE LX / ECO ENCORE FB - MULTI CHOICE

9 = ENCORE LX / ECO ENCORE FB WITH 2 X INSTANT CANISTERS

10 = ENCORE LX / ECO ENCORE FB WITH LARGE MILK CANISTER

11 = ENCORE LX / ECO ENCORE FB WITH LARGE CHOCOLATE CANISTER

12 = ENCORE LX / ECO ENCORE FB WITH LARGE MILK AND LARGE CHOCOLATE CANISTERS

7. Press the 'VEND' key to accept/enter.
8. The display will then indicate 'BUSY...'. Wait until the Display reverts to the 'DOOR OPEN' message.
9. Switch Off the machine.
10. Switch machine back on. (The remaining address settings for prices, dispense times etc can now be programmed).

Encore



westomatic

ECO ENCORE QUICK REFERENCE ADDRESSES:

Payment system settings:

Address 200 0 = Free Vend
 5 = MDB

Drink Selling Price Addresses:

Selection Description	Address
CUP ONLY SELECTION	401
HOT WATER	403
STILL WATER	409
SYRUP 1	421
SYRUP 2	431
INSTANT 1	471
INSTANT 2	491
INSTANT 5 / SOUP	551
INSTANT ESPRESSO	571
ESPRESSOCHOC/MOCHA	591
CREAMICHOC	616
CHOCOLATE	636
FRESHBREW	676
BTC REGULAR	701
FB ESPRESSO	751
DOUBLE FB ESPRESSO	774
INST / FB CAPPUCCINO	776
INST / FB / CAFE LATTE	801

Drink Set-Up Addresses:

Selection Description	Address	Default Setting
SINGLE CUP	400	0 - DISABLED
HOT WATER	402	0 - DISABLED
STILL WATER	408	0 - DISABLED
SYRUP 1	420	0 - DISABLED
SYRUP 2	430	0 - DISABLED
INSTANT 1	470	2 - ACTIVE W/ WHIP OPTION
INSTANT 2 / SOUP 2	490	1 - ACTIVE, NO WHIP OPTION
INSTANT 5 / SOUP 1	550	5 - SOUP ACTIVE, PERM WHIP
INSTANT ESPRESSO	570	3 - PERM WHIPPED
ESPRESSOCHOC / MOCHA	590	3 - PERM WHIPPED
CREAMICHOC	615	3 - PERM WHIPPED
CHOCOLATE	635	3 - PERM WHIPPED
FRESHBREW	675	0 - DISABLED
BTC REGULAR	700	0 - DISABLED
FB ESPRESSO	750	0 - DISABLED
DOUBLE ESPRESSO	773	3 - PERM WHIPPED
CAPPUCCINO	775	3 - PERM WHIPPED
CAFE LATTE	800	3 - PERM WHIPPED

Options for setting hot drink set-up's:

0 = DISABLED
1 = ACTIVE, NO WHIP OPTION
2 = ACTIVE, WITH WHIP OPTION
3 = PERMANENTLY WHIPPED

Encore



Options for setting cold syrup drink set-up's:

0 = DISABLED

1 = ACTIVE, STILL ONLY COLD

2 = ACTIVE, CARBONATED ONLY

3 = ACTIVE, CARBONATED & STILL COLD

Options for setting cold water set-up's:

0 = DISABLED

1 = ACTIVE WITH CUP DROP

2 ACTIVE, NO CUP DISPENSE