




EVOLVE

FUEL YOUR BODY

INSTALLING SCREEN MEDIA

westomatic
make it happen

INSTALLING SCREEN MEDIA

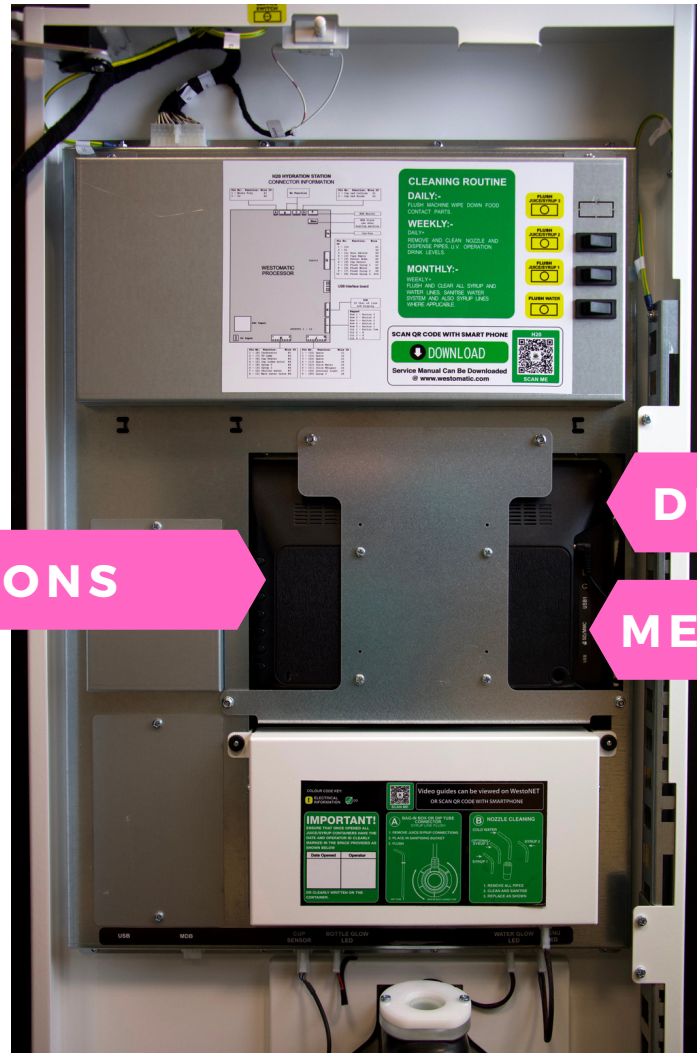


SETTINGS BUTTONS

DIGITAL MEDIA SCREEN

MEMORY CARD/USB SLOT

LOADING FILES ONTO SD CARD

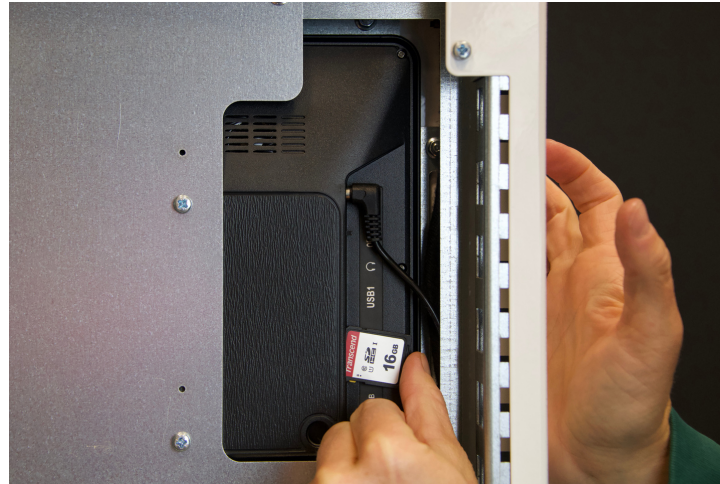

- We recommend using an SD Card to show media on the screen of the EVOLVE
- Remove the SD Card from the media screen
- Using a computer, read the contents of the SD card
- Delete all files currently on the SD Card (if there are any)

LOADING FILES ONTO SD CARD

Load your media:

For stock footage please use the following link [Evolve-Screen-Media.zip](#) and copy the files onto the SD card



Alternatively you can create your own using the following settings:

File Formats:

Image: PNG, JPG

Video: MP4

Frame Width x Height: 1280 x 720

Frame Rate: 30fps

Once created, please load onto the SD card

LOADING ONTO MACHINE

- Using the buttons on the back of the screen, highlight the 'SETTINGS' option and press 'ENTER' to select it
- Using the directional buttons again change the 'AUTOPLAY' options to your desired setting. i.e. 'movie' or 'photo' or 'photo & movie' should your screen have this option.
- Press **'MENU'** to save the settings
- Insert SD card back into digital media screen (as shown in the image)
- Files on the SD Card will automatically play and continually rotate the media on the card.
- The screen does have sound - to adjust it please use the remote control supplied.



REFUEL. RECOVER. REPEAT.



CONTACT



Westomatic Vending
Services Ltd,
Units 7 - 8 Forde Court,
Block 4 Forde Road,
Newton Abbot,
TQ12 4BT



+44 (0)1626 323100



sales@westomatic.com



www.westomatic.com