

CHANGE BUTTON FUNCTION



USING THE BUTTONS

PRE SOFTWARE UPDATE

- Button 1 = UP
- Button 2 = DOWN
- 3 Button 3 Quick = BACK Long = SELECT
- X Button 4 = Not Used



POST SOFTWARE UPDATE

- Button 1 = UP
- Button 2 = DOWN
- 3 Button 3 = CANCEL
- Button 4 = ENTER



1 - ENSURING BOTTLE WATER IS ACTIVE





- Open Door
- In DOOR OPEN mode
- Scroll down to SERVICE MODE
- Using the Buttons -Input code
 3211





- In Service Mode
- Scroll to DRINKS
- Using the Button SELECT





- Scroll down to WATERS
- Using the Button SELECT





- Scroll to BOTTLE STILL WATER
- Using the Button SELECT





- Scroll down to DRINK SETUP
- Using the Button SELECT





- Scroll to ACTIVE
- Using the Button SELECT
- Using the UP/DOWN buttons
- Toggle to ensure the option \

IMPORTANT:

MAKE SURE YOU KEEP GOING BACK OUT OF THE MENU UNTIL IT 'SAVES THE SETTINGS' OTHERWISE YOUR CHANGES WON'T BE STORED

2 - CHANGE FUNCTION OF THE BUTTON





- Open Door
- In DOOR OPEN mode
- Scroll down to SERVICE MODE
- Using the Buttons -Input code
 3211





- In Service Mode
- Scroll to MACHINE SETTINGS
- Using the Button SELECT





- Scroll down to BUTTON SETTINGS
- Using the Button SELECT





- Scroll to DRINK BUTTONS
- Using the Button SELECT





- Scroll down to BUTTON
- Uusally this would be BUTTON 1
- Using the Button SELECT





- Using the UP/DOWN buttons
- Scroll to through options
- Scroll to BOTTLE STILL WATER
- Using the Button SELECT

IMPORTANT:

MAKE SURE YOU KEEP GOING BACK OUT OF THE MENU UNTIL IT 'SAVES THE SETTINGS' OTHERWISE YOUR CHANGES WON'T BE STORED



IS LIFE - DON'T WASTE IT



CONTACT



Westomatic Vending Services Ltd, Units 7 - 8 Forde Court, Block 4 Forde Road, Newton Abbot, TQ12 4BT





+44 (0)1626 323100



sales@westomatic.com



www.westomatic.com