

PRO EASY 60000

ERROR CODES



Error Codes

ERROR CODE	SUB CODE	EVA ERROR REFERENCE	ERROR DESCRIPTION
1	1÷8	EGU_N	Drum selection door does not open
3	1÷8	EGU_N	Drum selection door burglary alarm (forced open)
4	1÷8	EJF_N	Generic drum control board error
5	1÷8	EJF_N	Drum homing timeout (sensor has not detected magnet)
7	1÷8	E07	Drum positioning error
8	1÷8	E08	Drum encode error
9	1÷8	EJF_N	Drum gearmotor overcurrent error
10	15	EOA	Internal temperature probe error
11	15	EOA	Evaporator temperature probe error
16	255	ECF_255	Machine communication bus error
16	15	///	Communication error with powerboard
16	1÷8	///	Drum control board communication error
16	85	///	Communication error with GCD display

Error Codes

ERROR CODE	SUB CODE	EVA ERROR REFERENCE	ERROR DESCRIPTION
25	1÷8	//	Drum door opening error during reloading
26	1÷8	//	Drum door closing error while reloading
29	1÷8	E29	Drum control board reset
30	0	EJH	Refrigerator safety intervention (not reached Health Control temperature within time out after closing machine door)
50	0	EAM	Cashless system response timeout
51	1÷4	//	MDB banknote reader error
91	0	EJY	Door closed without Health Control event being reset
93	0	EIO	Telemetry error while sending event

Sub Code 1÷8 relates to the applicable Drum selection number

Error Codes

EVA ERROR REFERENCE	ERROR DESCRIPTION
EGS	Opening Door
EGT	Door Closing
EAR	Payment system out of order
EC1B	Button Short-circuited
OA1B	Charging Done
ELE_N	Selection / Blank disc (N= disc 1÷8)
EA1A	Removing the change-giver box
EA1*VEND	Single Sale Report
EA1*TEMPER	Machine temperature report