



snackpoint

media

LOADING THE HIGH CAPACITY TRAY


westomatic
make it happen

LOADING THE HIGH CAPACITY TRAY

FOR QUINTO MACHINES FITTED WITH A HCT ONLY

1 LOCATE **RED** RELEASE LEVERS ON THE HIGH CAPACITY TRAY:

Press these down to allow tray to slide out.

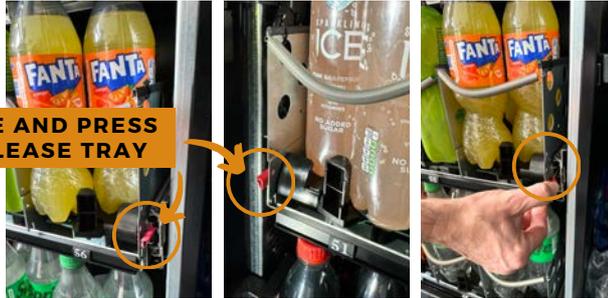


2 SLIDE HIGH CAPACITY TRAY OUT



3 LOCATE BOTTLE PUSHER:

Squeeze plates together & slide **ALL THE WAY BACK**.

SQUEEZE TOGETHER AND SLIDE BACK

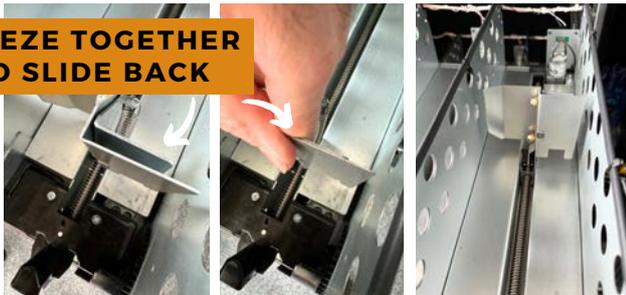


4 LOADING BOTTLES:

Ensure 1st bottle is loaded **OPEN SIDE FIRST**.

IMPORTANT

OPEN SIDE 1ST!!!

LOAD BOTTLES ON OPEN SIDE FIRST

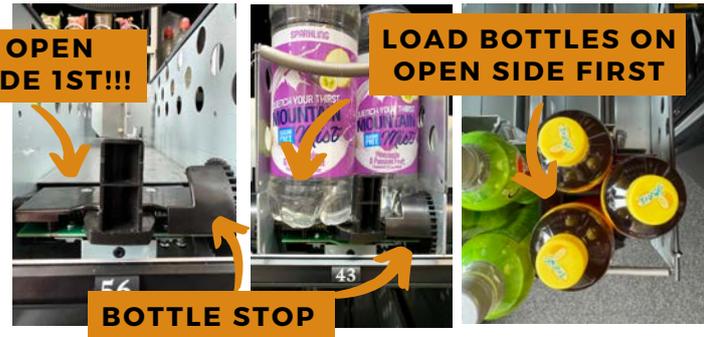

LOADING THE HIGH CAPACITY TRAY

5 DO NOT LOAD 1ST BOTTLE ON CLOSED SIDE:

This will cause the machine to jam.



6 MOVE BOTTLE PUSHER BACK INTO POSITION ENSURING THERE IS NO GAP:

You may need to sacrifice a bottle.

ENSURE THERE IS NO GAP



7 SLIDE HIGH CAPACITY TRAY IN:

Unlocking red release levers.



NEXT - TELL THE MACHINE IT HAS BEEN RELOADED





LOADING THE HIGH CAPACITY TRAY

8 TELL MACHINE IT'S BEEN RELOADED - EITHER BY:

FULL CHARGE:

This automatically fills every section in the machine
(ONLY use this if the machine is full).

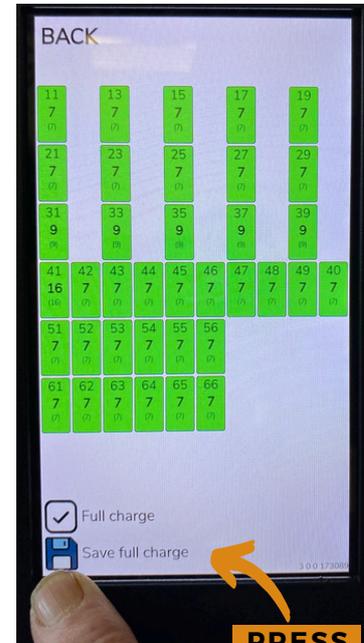
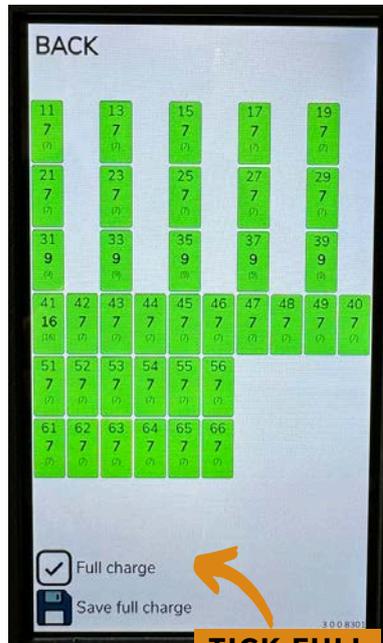


LOADING THE HIGH CAPACITY TRAY

9 TELL MACHINE IT'S BEEN RELOADED - OR BY:

FILLING INDIVIDUAL ROWS:

This allows each row to be filled individually with the precise number of items added.

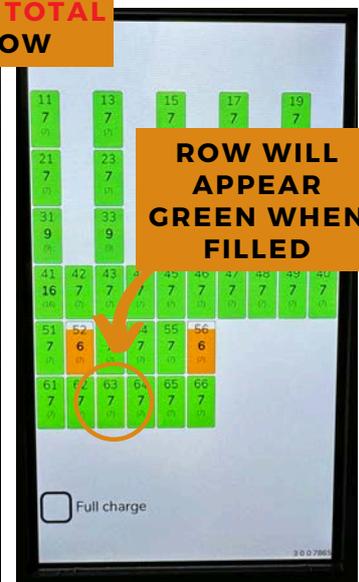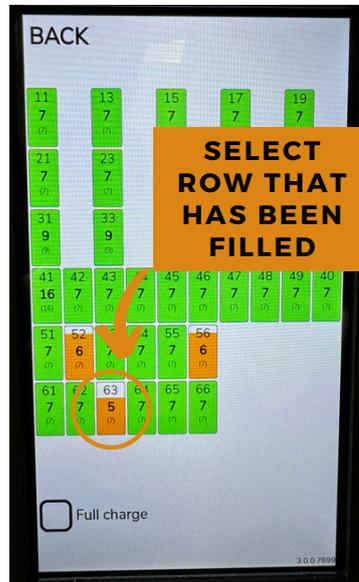



CONTACT



Units 7-8 Block 4 Forde
Court, Forde Road,
Brunel Industrial
Estate, Newton Abbot,
Devon, TQ12 4BT

snackpoint

westomatic
make it happen



+44 (0)1626 323100



support@westomatic.com



www.westomatic.com