

EASY 6000


**REPLACING
SELECTION BUTTON**



EASY6000

Replacing Selection Button

Open the Coin Mechanism box door, and unscrew the screw used to fix back face of box.

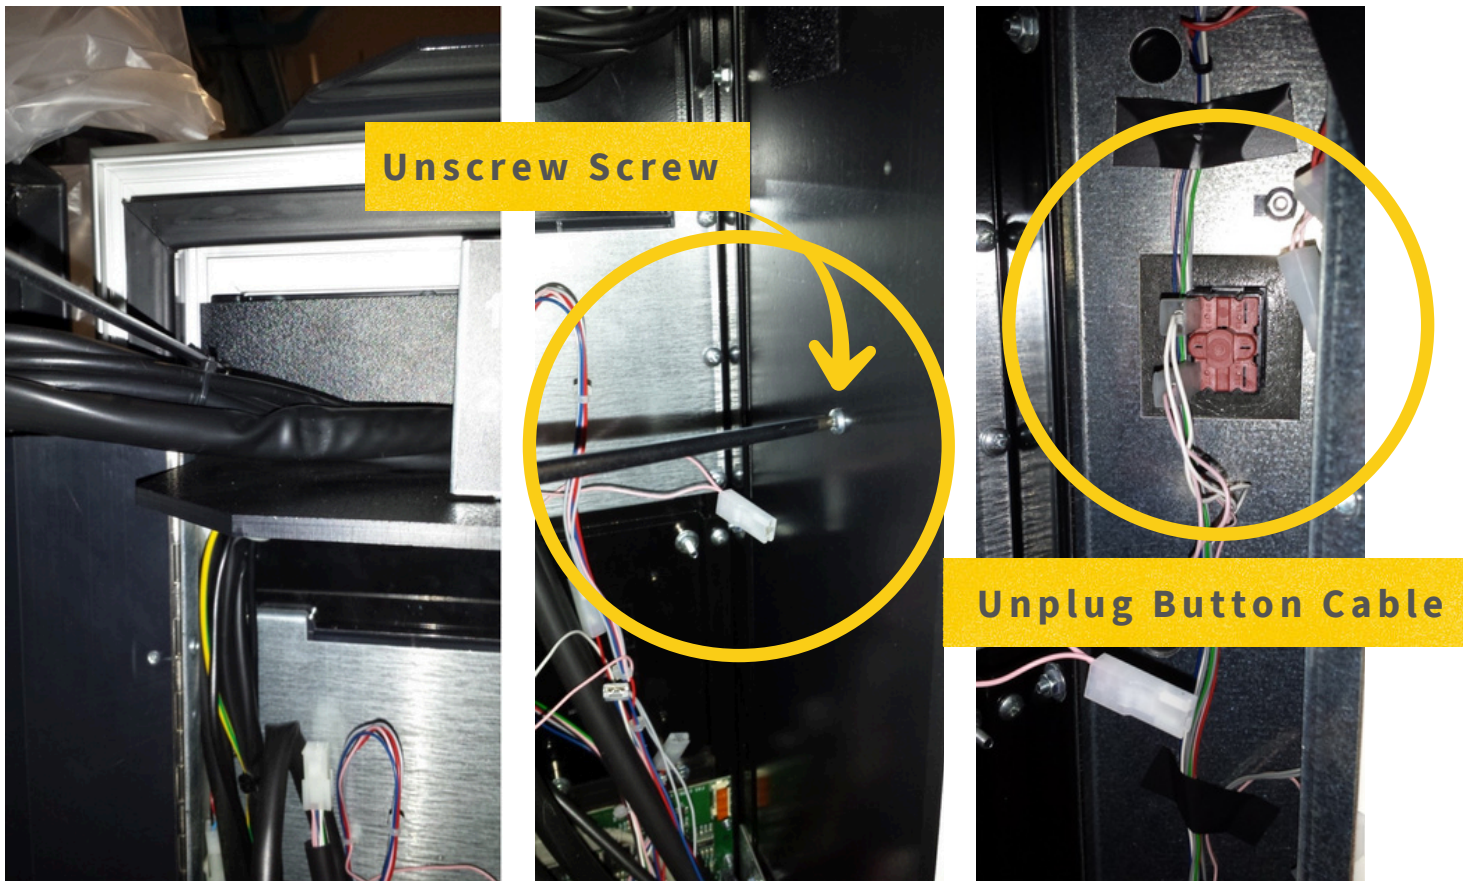

Removal of the Panel now makes it is possible to unplug the button cable and disconnect the button that is just clipped into place.