

high capacity tray

snackpoint

skudo

LOADING THE HIGH CAPACITY TRAY

westomatic
make it happen

LOADING THE HIGH CAPACITY TRAY

FOR QUINTO MACHINES FITTED WITH A HCT ONLY

1

LOCATE **RED** RELEASE LEVERS ON THE HIGH CAPACITY TRAY:

Press these down to allow tray to slide out.



LOCATE AND PRESS
TO RELEASE TRAY

2

SLIDE HIGH CAPACITY TRAY OUT




3

LOCATE BOTTLE PUSHER:

Squeeze plates together & slide **ALL THE WAY BACK**.

SQUEEZE TOGETHER
AND SLIDE BACK

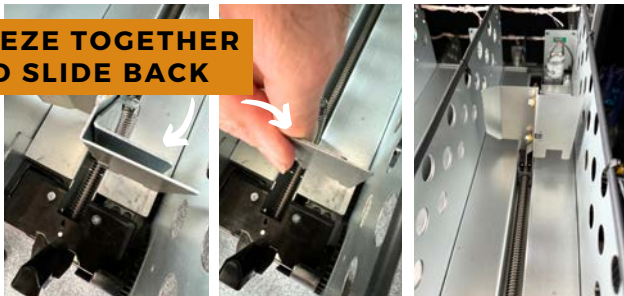

4


LOADING BOTTLES:

Ensure 1st bottle is loaded **OPEN SIDE FIRST**.

! IMPORTANT

OPEN
SIDE 1ST!!!

LOAD BOTTLES ON
OPEN SIDE FIRST

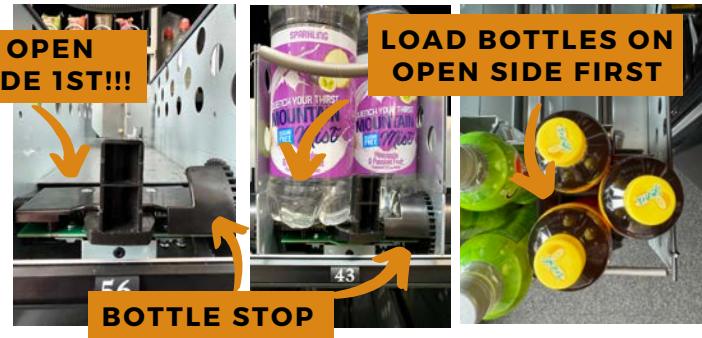

BOTTLE STOP

LOADING THE HIGH CAPACITY TRAY

5

DO NOT LOAD 1ST BOTTLE ON CLOSED SIDE:

This will cause the machine to jam.



DO NOT LOAD 1ST BOTTLE ON CLOSED SIDE



BOTTLE STOP

7

SLIDE HIGH CAPACITY TRAY IN:

Unlocking red release levers.




UNLOCK RELEASE LEVERS

6

MOVE BOTTLE PUSHER BACK INTO POSITION ENSURING THERE IS NO GAP:

You may need to sacrifice a bottle.

ENSURE THERE IS NO GAP

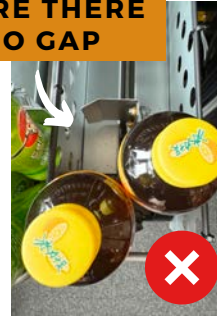

! IMPORTANT

NEXT - TELL THE MACHINE IT HAS BEEN RELOADED




LOADING THE HIGH CAPACITY TRAY

8

TELL MACHINE IT'S BEEN RELOADED - EITHER BY:

FULL CHARGE:

This automatically fills every section in the machine
(ONLY use this if the machine is full).

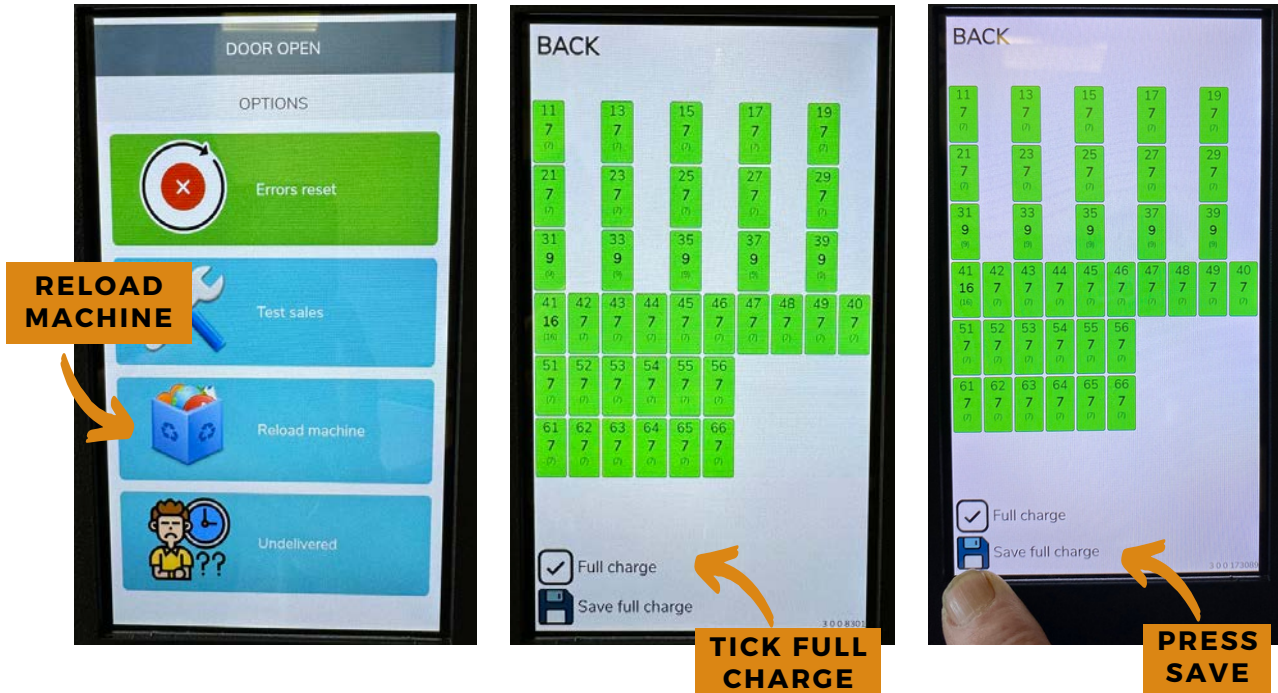


LOADING THE HIGH CAPACITY TRAY

9 TELL MACHINE IT'S BEEN RELOADED - **OR** BY:


FILLING INDIVIDUAL ROWS:

This allows each row to be filled individually with the precise number of items added.

RELOAD MACHINE

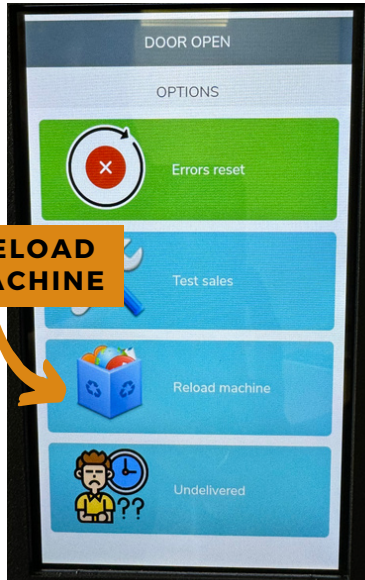

BACK

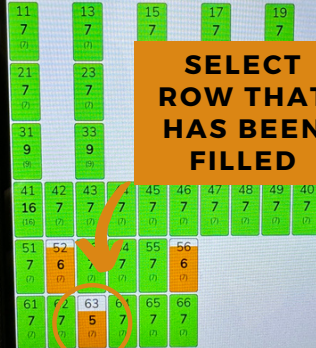


SELECT ROW THAT HAS BEEN FILLED

BACK



INPUT NUMBER OF PRODUCTS PRESENT IN TOTAL IN THE ROW

ROW WILL APPEAR GREEN WHEN FILLED

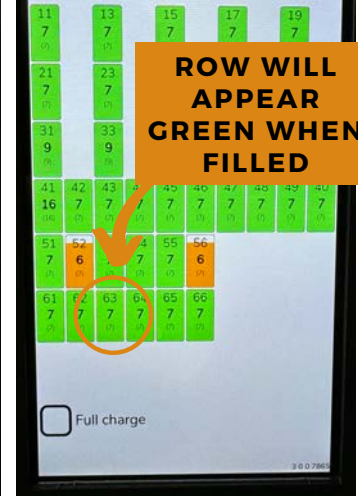



CONTACT



Units 7-8 Block 4 Forde
Court, Forde Road,
Brunel Industrial
Estate, Newton Abbot,
Devon, TQ12 4BT

snackpoint

westomatic
make it happen



+44 (0)1626 323100



support@westomatic.com



www.westomatic.com