

snackpoint

SETTING PRICES

westomatic
make it happen

www.support.westomatic.com

SETTING PRICES


1 ACCESS THE MENU

Press Button 1 on back of the door.




2 MACHINE PARAMETERS

Enter machine parameters screen.

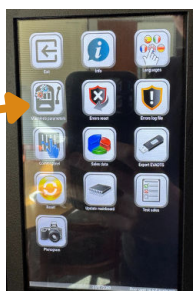

3 SELECTIONS MANAGEMENT

Enter selections management screen.

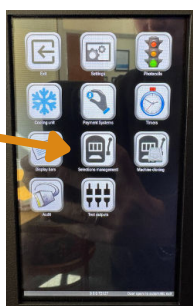

4 PRICES


Enter prices screen.



SETTING PRICES

5 SELECT AN ITEM

Highlight a selection item.

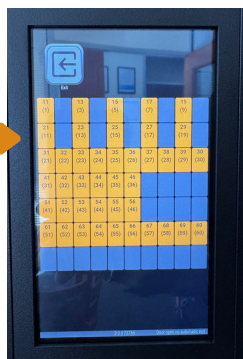


6 INPUT PRICES

NB. Do not enter a decimal point.

PRICE 1: Primary price.
PRICE 2 & 3: Different pricing periods.

Can apply to a single selection, a complete shelf or the entire machine.

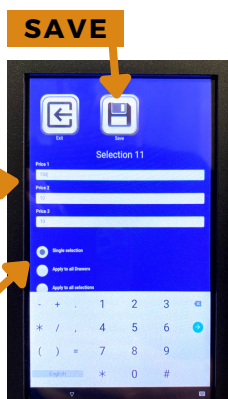


7 PRESS SAVE ICON



8 SAVE ACROSS ALL

To apply prices across all press here...

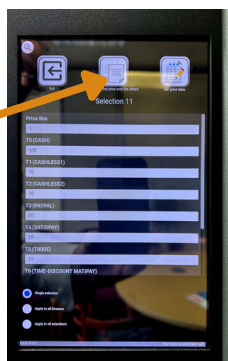

ENSURE YOU EXIT ALL THE WAY OUT UNTIL IT SAVES!