

primo

COMPACT

FRESH MILK

INSTALL, CLEAN & FILL

westomatic
make it happen



INSTALL MILK FRIDGE

The milk fridge is designed to work in combination with the Primo Compact:

- External Dimensions Fridge: W230xD420xH455mm
- External Dimensions Total: W530xD515xH600mm
- Capacity Milk Fridge: 4litres/8pints fresh milk
- Noise Emission: <70dB
- Weight: 19kg (Total: 57kg)



Parts Included:

Check the contents:

- Milk Fridge
 - Power cable
 - Milk container with lid
 - 2 x keys
 - Milk hose
 - Measuring Jug
 - Safety Instructions
 - OPTIONAL: Ingredient Box
- PN: 1057339



NB: The machine will have been set up to your specifications and tested at Westomatic HQ prior to install. All parts have been assembled on the machine. The QR code inside the machine gives access to the We:Support pages with technical information.

1

Place the Fridge
on a level surface
Min Clearances:
Rear: 50mm



2

Ensure the
protective
plastic is
removed from
the top



3

Remove green
cover from the
nozzle on the
side of the
machine



4

Connect milk
hose to milk
output - feed
hose through
into fridge



5

Clean milk fridge,
place hose in
milk container,
place in machine
and close door



6

Move fridge
into place next
to the Primo
Compact



7

Connect fridge to a 230V mains power socket - ensure supply has minimum 45W



8

Switch the Fridge on using button on the front



9

Machine is ready to use



Parts Needed:



PRIMO COMPACT Fresh Milk	QTY	PART NUMBER
1 Litre Milk Line Cleaner	1	1053009
Brewer Cleaning Tablets (x50)	1	1015015
Screen Cleaner (100ml)	1	1015014
Microfibre Cloth	1	1015012

FRESH MILK CLEANING:

These instructions show the steps for Cleaning the Fresh Milk Fridge:

- The Fresh Milk Fridge must be cleaned **every day**
- The Primo will remind you to clean the fridge at a pre-set time each day - the machine won't work unless this is done



1

Before you start - wash hands or wear gloves



2

Open the milk cooler, remove the hose and wipe clean



3

Empty the milk canister



4

Clean the canister with dishwasher detergent



5

Rinse with thoroughly clean water



6

Ensure you clean the lid thoroughly with detergent too



FRESH MILK LINE CLEANING:


These instructions show the steps for Cleaning the Fresh Milk Lines:


For this process you will need:

- Westomatic Milk Line Cleaner
- Measuring Jug
- Fresh Water
- Cleaning wipes




1

On the
touchscreen:
Select the 
machine menu

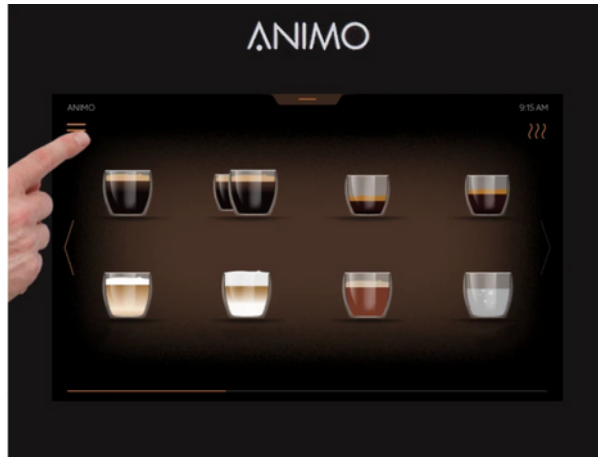


4

Open fridge,
remove hose
and wipe, press
NEXT  on
screen



2

Select **CLEAN
MILK SYSTEM**
Follow machine
instructions

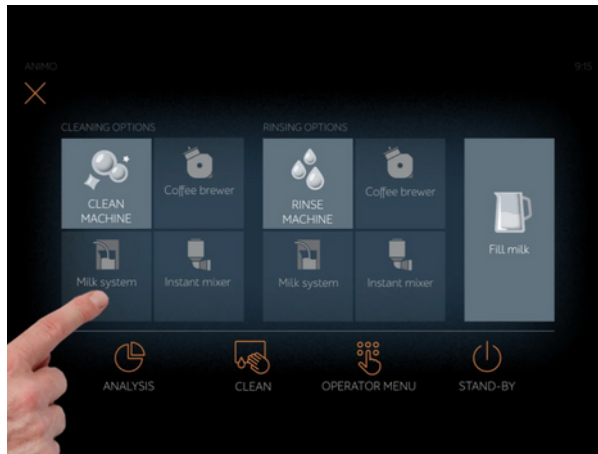

5

Fill a measuring
jug with 500ml
of clean water



3

Before you
start - wash
hands or wear
gloves



6

Use 30ml of
Westomatic
Milk Line
cleaner. Press
NEXT on screen



7

Place the hose in the jug and press NEXT on the screen



10

Empty the container



8

Place container under the outlet - Hot water is dispensed - press NEXT on screen




11

Replace container back under outlet and press NEXT on screen



9

System cleans the lines - This takes about 4 minutes

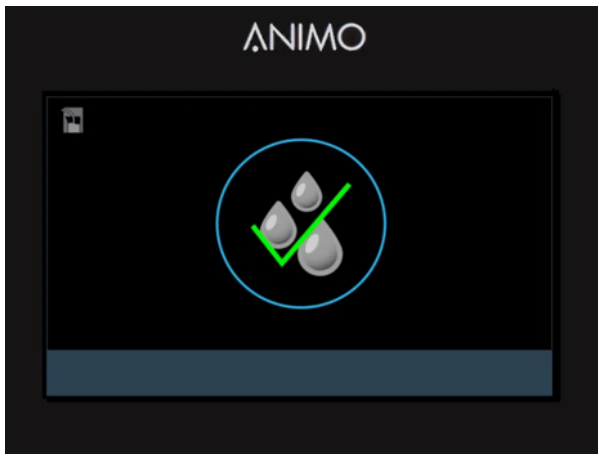

12

Remove and clean hose, and press NEXT on screen



13

Clean the measuring jug with dishwasher detergent



14

Fill measuring jug with 1 litre of clean water




15

Place the hose in the jug, and press NEXT on the screen



16

System cleans the lines - This takes about 4 minutes - Hot water dispensed

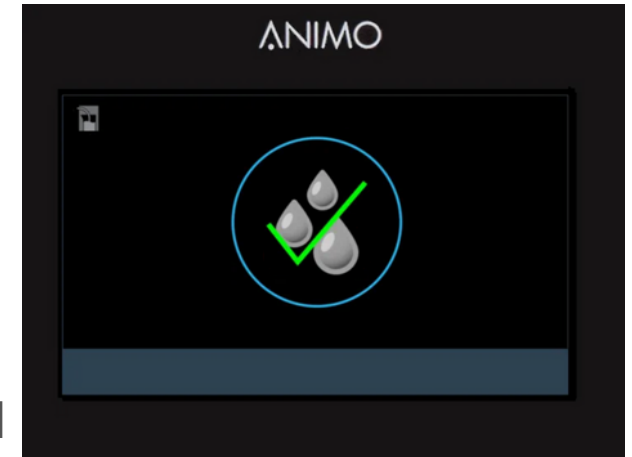


17

Remove the container, press NEXT on the screen



18

The cleaning process is stored HACCP cleaning schedule. Press X to continue

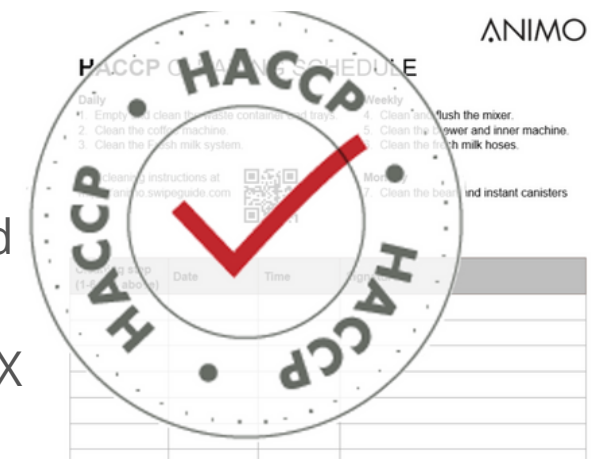

19

Clean the milk container with dishwasher detergent



20

Place milk container back into fridge with hose



21

Clean drip tray and cover behind



22

Clean drip tray using a damp cloth



23

Machine is ready to use



FRESH MILK FILLING:


These instructions show the steps for Filling the Fresh Milk Fridge:

- Ensure the Fresh Milk Fridge and lines are clean
- Clean the Fridge before every refill
- Clean the Lines daily after use



1

Press menu to start

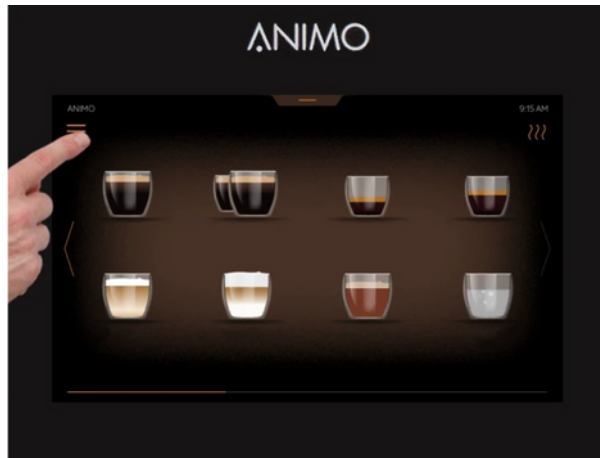


4

Open fridge, remove milk container and lid



2

Select Fill Milk, the system will start filling, follow on screen instructions

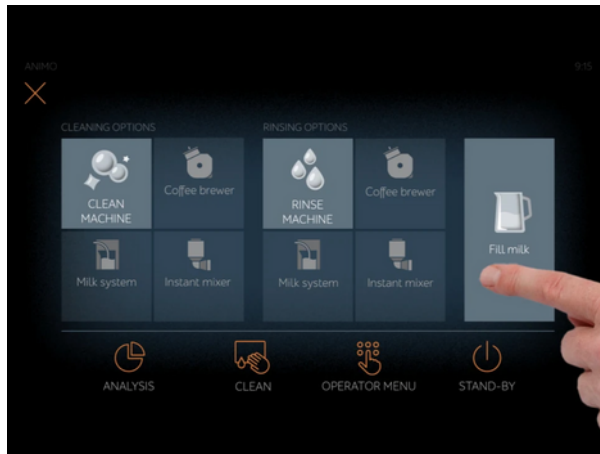

5

Fill the container with cold milk - max 8 pints/4 litres
Press → NEXT



3

Before you start wash your hands thoroughly



6

Replace the lid on the container, and the line into the container



7

Place Fridge back into machine, close the door and press NEXT



10

Remove the container - press NEXT




8

Place empty container under the outlet - press NEXT on screen




11

The milk system is ready to use. Press X (close) to go to recipe menu

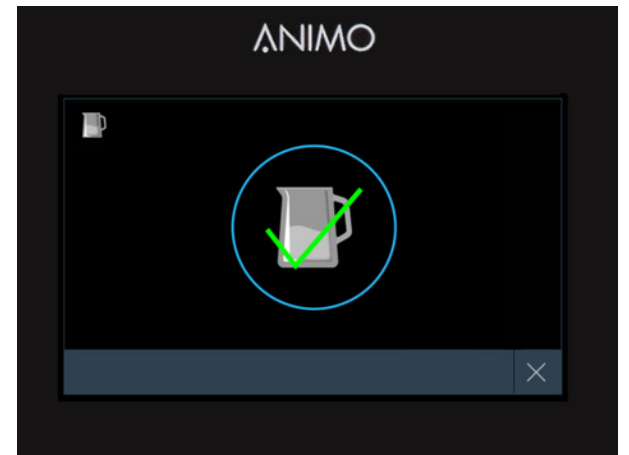


9

The machine will flush and fill the milk system.

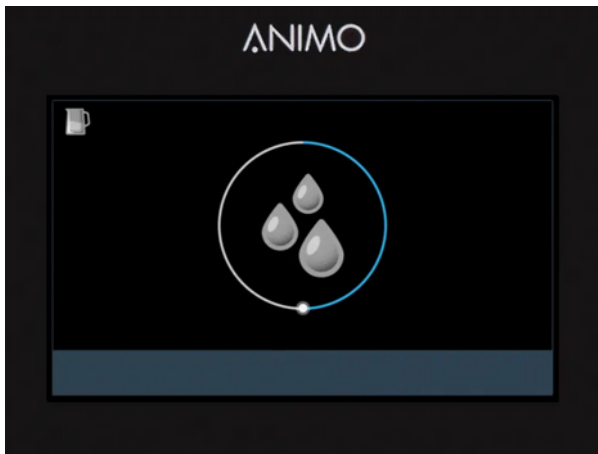

12

All drinks with fresh milk are available to use

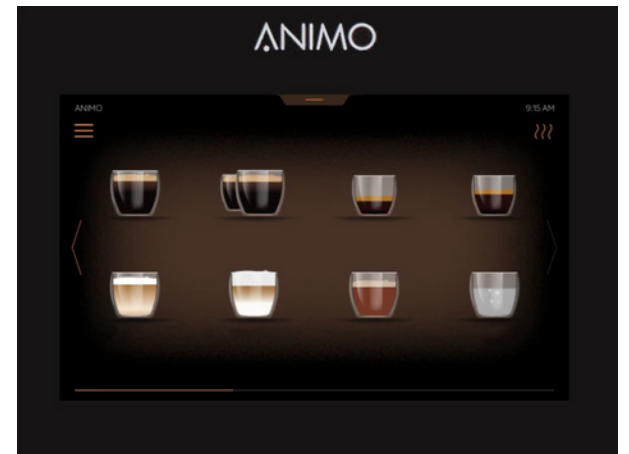



CONTACT



Westomatic Vending
Services Ltd,
Units 7 - 8 Forde Court,
Block 4 Forde Road,
Newton Abbot,
TQ12 4BT

prigo



+44 (0)1626 323100



sales@westomatic.com



www.westomatic.com