

## YEARLY CLEANING



## **CLEANING THE MACHINE**


These instructions show the steps for YEARLY cleaning of the Primo Maxi:

- Cleaning the ingredient mixer parts
- Clean the drip tray and cup tray
- Clean the canisters & chutes
- Cleaning the extractor fans




**1** 

1.03.02 - counters/service-counters/rinse& cleancounters

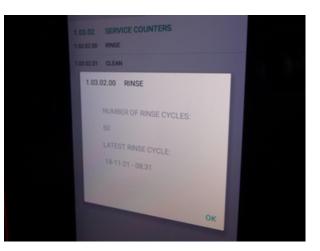


4

Grease the O-Ring for the mixer bowl.

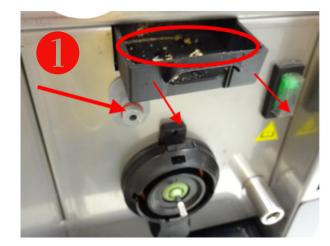

2

Check:
Rinse is done
daily, Cleaning
Tablet weekly.

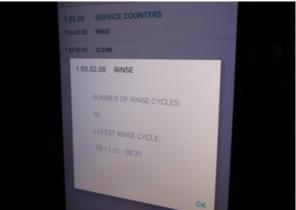

5

Remove, clean & dry the dust tray.



3

Remove the mixer bowl & base - check the condition of the seals and the motor turns.



6

Clean and replace the Mixer base and Mixer bowl.



7

Check and clean both fans - back & side (also check the air-hose & clean if necessary.)




Grease the O-Ring on the door for smooth closing of the machine.



Remove the brewer from machine, then remove back cover.





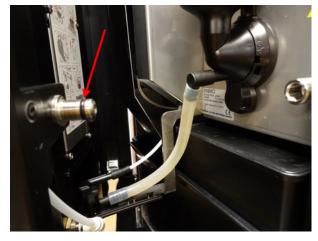





Slide out funnel. Remove piston cover - access to dirty cover of upper piston




Remove the screw of the lower piston filter.



Take out the upper filter and ring





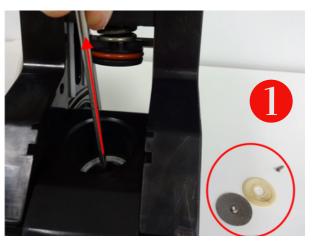


Use the brewer connecting screw to remove the lower piston from chamber




Clean the brewer under hot water ensure coffee removed from upper piston



Dry the brewer with cloth grease lower piston shaft

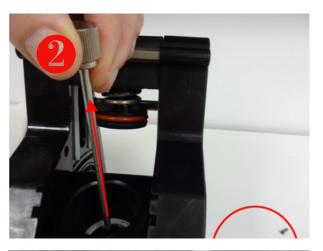



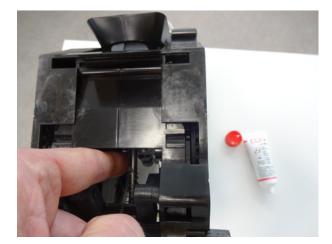




Replace: Filters / Filter Ring / Piston cover / Funnel / Back of brewer




2.13.01 - Cycle counter. Check to see Service brewer counter if 25000, replace hygiene parts.



Clean the Grinder Discs annually.

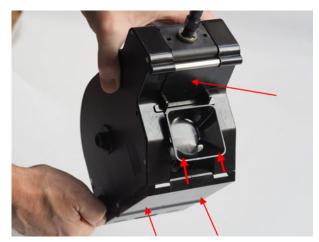

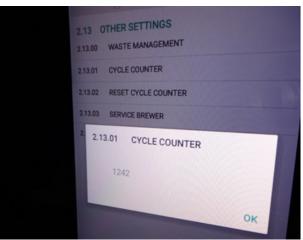






If the 4 bar and 14 bar valves are still brass upgrade to the plastic version.



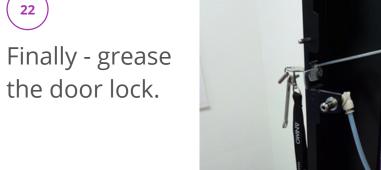




Grease the O Ring of the brewer pump



21

2.06.02 Replace water filter, and reset the counter.

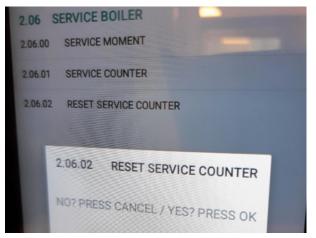



## CONTACT



Westomatic Vending Services Ltd, Units 7 - 8 Forde Court, Block 4 Forde Road, Newton Abbot, TQ12 4BT







+44 (0)1626 323100



sales@westomatic.com



www.westomatic.com