



HYDRATION STATION

6 MONTH CHECK UP!





HYDRATION STATION

6 month Check up!

Key areas to look at:

STERILISE

- Water Lines
- All contact & hygiene parts

SANITISE

- Juice Lines

REPLACE

- UV Filter
- Water Filters
(Microplastics/Sediment)

CLEAN

- Bottle Dispense Area
 - Floor
 - Door
 - Waste bucket
- Using a microfibre cloth & sanitising spray:
- Hover Select Buttons
 - Digital Screen

CLEAN!

Safety Checks:

- **PAT test machine** - Insulation & Earth Bond only
- **Check Mains Lead** - for damage/do not connect to extension lead
- **Check Fuses** -correct value and type
- **Check Looms** - connections are free from damage and fully secured



Tools Required

PAT Tester
Vending Hydrogen peroxide sanitiser
Soft Microfibre cloths
Sanitising Spray
Cleaning Cloths
Bucket of warm sanitising water


Estimated Labour Time - 0.75hrs

PARTS LIST



**H2O
Hygiene Kit**

PN: 2100003

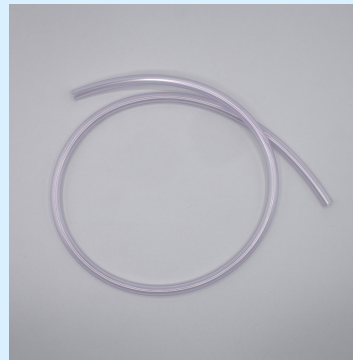

**Tubing -
Clear PVC -
6mm x 9mm**

PN: 1029037



UV Filter Kit

PN: 2100047



**Tubing -
8mm x 2mm**

PN: 1029012



**Water Filter
Microplastics**

PN: 1024023



**Water Filter
Sediment**

PN: 1024024