



**high capacity tray**

# snackpoint media

**MOVING THE HCT**

westomatic  
*make it happen*

# snackpoint



## Moving the HCT

- 1 SLIDE THE HCT OUT**  
Squeeze the red clips on either side of the tray to slide it.



- 2 REMOVE SCREWS**  
On the underside of the tray there are 2 screws that need to be removed in order to lift the tray out.

NB. Make sure you remove the products from the tray.

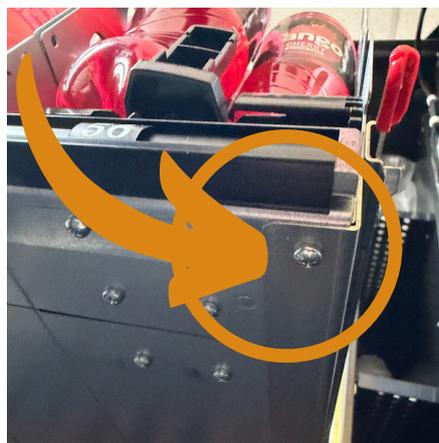
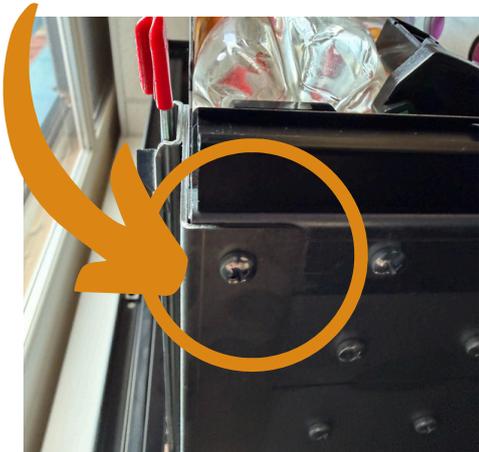


# snackpoint

3

## UNCLIP THE TRAY HARNESS

Make sure you do this BEFORE you try and lift tray out.

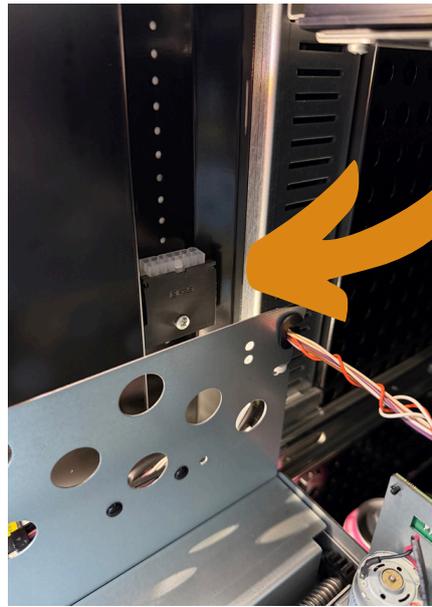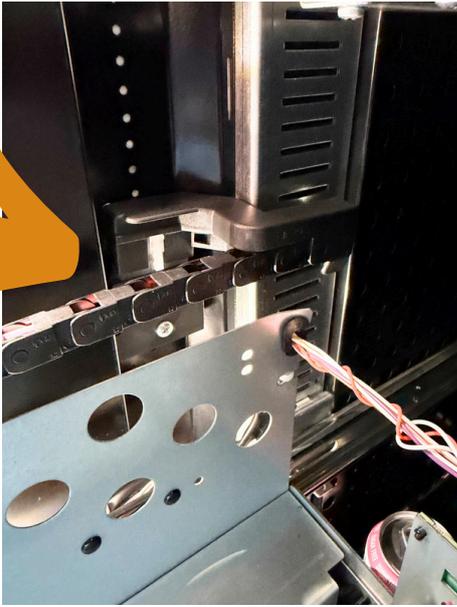

4

## REMOVE THE TRAY

Squeeze Red Clips - and slide tray to unlock the tray from the rails. Slide the tray forwards before lifting up to release from the locking cut out on the rails.




LOCKING CUT OUT



# snackpoint

## 5 REPOSITION TRAY RAILS

To remove rail lift up sideways to unlock and then pull outwards. Reposition and repeat on the opposite side.

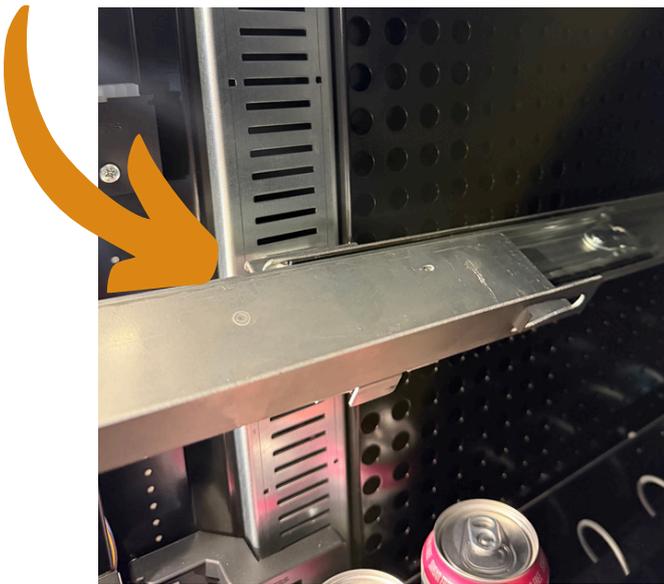

## 6 REASSEMBLE ALL PARTS

- Replace the tray onto the rails - use the red clips and ensuring to slide the tray into the locking cut outs - Repeat on both sides.
- Screw tray into place - Repeat on both sides.
- Replace the tray harness - Repeat on both sides.

NB - The tray will not side in properly if not positioned correctly.