



high capacity tray

snackpoint **skudo**

MOVING THE HCT

westomatic
make it happen

snackpoint

Moving the HCT

1

SLIDE THE HCT OUT

Squeeze the red clips on either side of the tray to slide it.





2

REMOVE SCREWS

On the underside of the tray there are 2 screws that need to be removed in order to lift the tray out.



NB. Make sure you remove the products from the tray.

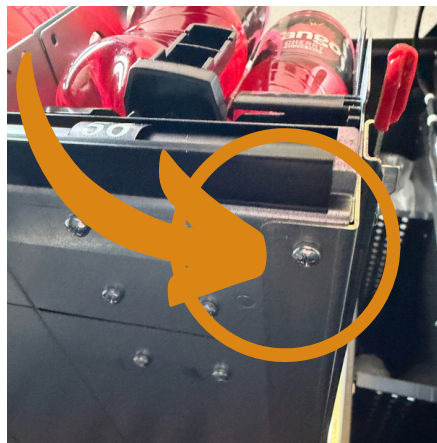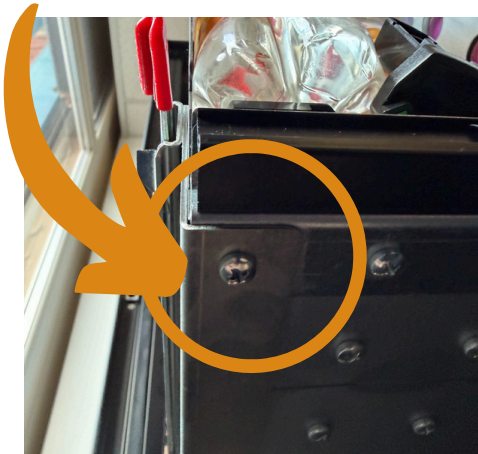

snackpoint

3 UNCLIP THE TRAY HARNESS

Make sure you do this BEFORE you try and lift tray out.

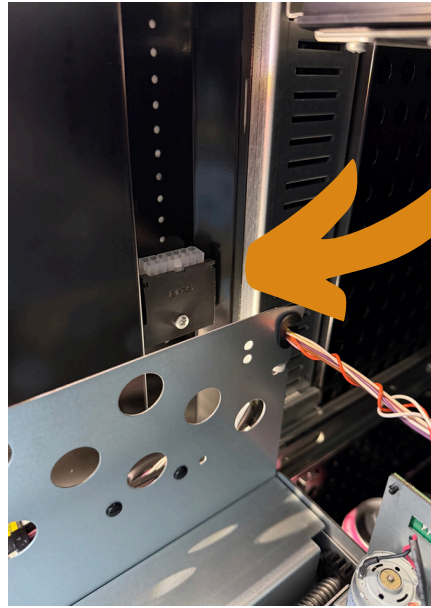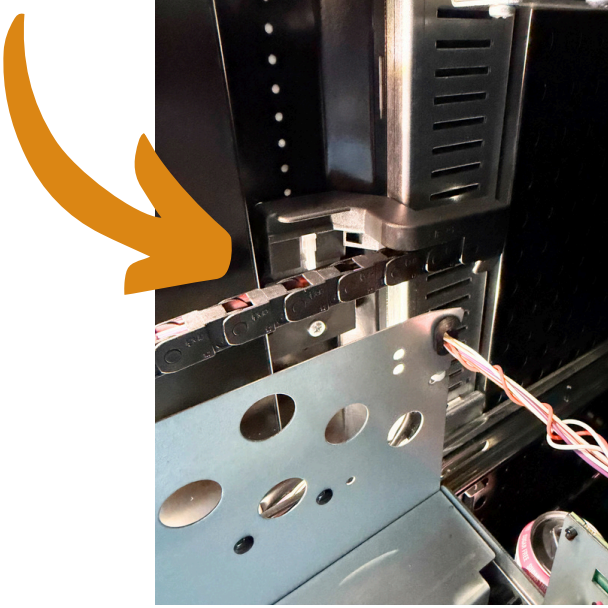

4 REMOVE THE TRAY

Squeeze Red Clips - and slide tray to unlock the tray from the rails. Slide the tray forwards before lifting up to release from the locking cut out on the rails.



LOCKING CUT OUT




snackpoint

5

REPOSITION TRAY RAILS

To remove rail lift up sideways to unlock and then pull outwards. Reposition and repeat on the opposite side.

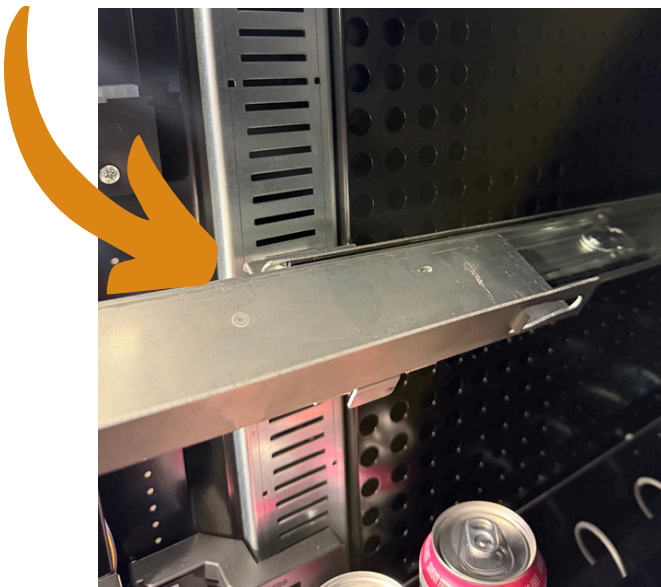

6

REASSEMBLE ALL PARTS

- Replace the tray onto the rails - use the red clips and ensuring to slide the tray into the locking cut outs - Repeat on both sides.
- Screw tray into place - Repeat on both sides.
- Replace the tray harness - Repeat on both sides.

NB - The tray will not side in properly if not positioned correctly.