

Engore

12 MONTH CHECK UP! FRESHBREW/INSTANT



Engore



12 month Check up!

Key areas to look at:		
BOILER	Remove and clean boiler probesDe-scale boiler (if required)Replace boiler valves	
WATER FILTER	 Replace water filter Calibrate water dispense flow rate - 0.6 Fl.oz/sec 	
WHIPPER DECK	 Clean extraction system Check all whipper motors are functioning correctly Replace whipper bases/seals/orings 	
BREWER	 Remove and clean Brewer For LPB: Clean LPB filter platform and replace filter belt 	
WATER TEMP	 Perform machine flush Ensure there are no leaks Check water temperature 	
MOVING DISPENSE HEAD	 Check moving dispense head is positioned correctly Nozzles align correctly with cup dispense area 	

Encore



12 month Check up!


Key areas to look at:

CUP SENSOR

- Clean cup sensor
- Test operation of cup sensor use your own cup
- Check cup drop operation and cup settings - placement time = 2secs, carousel timeout = 30 secs

TEST DRINKS

- Test a minimum of one drink of each type with machine door closed (with coins if coin mech fitted)
- Check drink quality by tasting

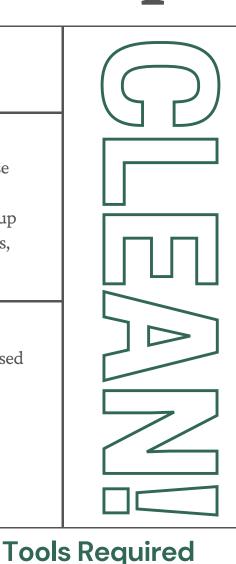

Safety Checks:

- PAT test machine Insulation & Earth Bond only
- Check Mains Lead for damage/do not connect to extension lead
- Check Fuses -correct value and type (remove fuses where not needed eg refrigeration fuse)
- **Check Looms** connections are free from damage and fully secured

PAT Tester



PAT Tester
Digital Thermometer
Portable Hoover
Gram Scales
M4 (7mm) socket
Cross Head Screwdriver



Estimated Labour Time - 1.25hrs



Encore



Hygiene Kit -Eco Encore

PN: 201107



Hygiene Kit – Eco Encore Brewer

PN: 200041019



Filter Roll

PN: 1039018



Filter Platform Complete

PN: 200041005s



Cylinder Seal - Filter **Platform**

PN: 1044014



Seal - Piston **Assembly**

PN: 1044008



Motor -Whipper 15000RPM 230V Short Shaft

PN: 1040001



Spout Dispense Tube

PN: 1044002



Boiler Float





Thermistor Probe

PN: 1045001



Valve - 230V 8mm Low Scale Adjuster

PN: 1053002



Delivery Valve Seal

PN: 1029017



Boiler Port Blank Plug

PN: 1029014



Seal - Valve Membrane

PN: 100047113