

TOUGH EASY 6000

INSTALLATION & MAINTENANCE GUIDE



Welcome

TO YOUR NEW EASY 6000T

INITIAL CHECK LIST

1

CHECK FOR DAMAGE

Report any issues

2

LEVEL UP

Using the adjustable feet and a spirit level
make sure the machine is level.

3

ATTACH FRONT PLINTH

Detachable for easy maneuvering / move
into position

4

POWER ON MACHINE

(wait 12 hours for machine to reach temperature)

5

CONFIGURE & FILL COIN MECH/CARD READER

(if fitted)

6

CHECK DRUM CONFIGURATION

(adjust if necessary)

7


DRUM / DELIVERY DOOR TEST - (MACHINE TEST)

8

FILL MACHINE, SET PRICES & SELL BY DATES

AND YOU'RE ALL SET



SCAN QR CODE FOR HELP

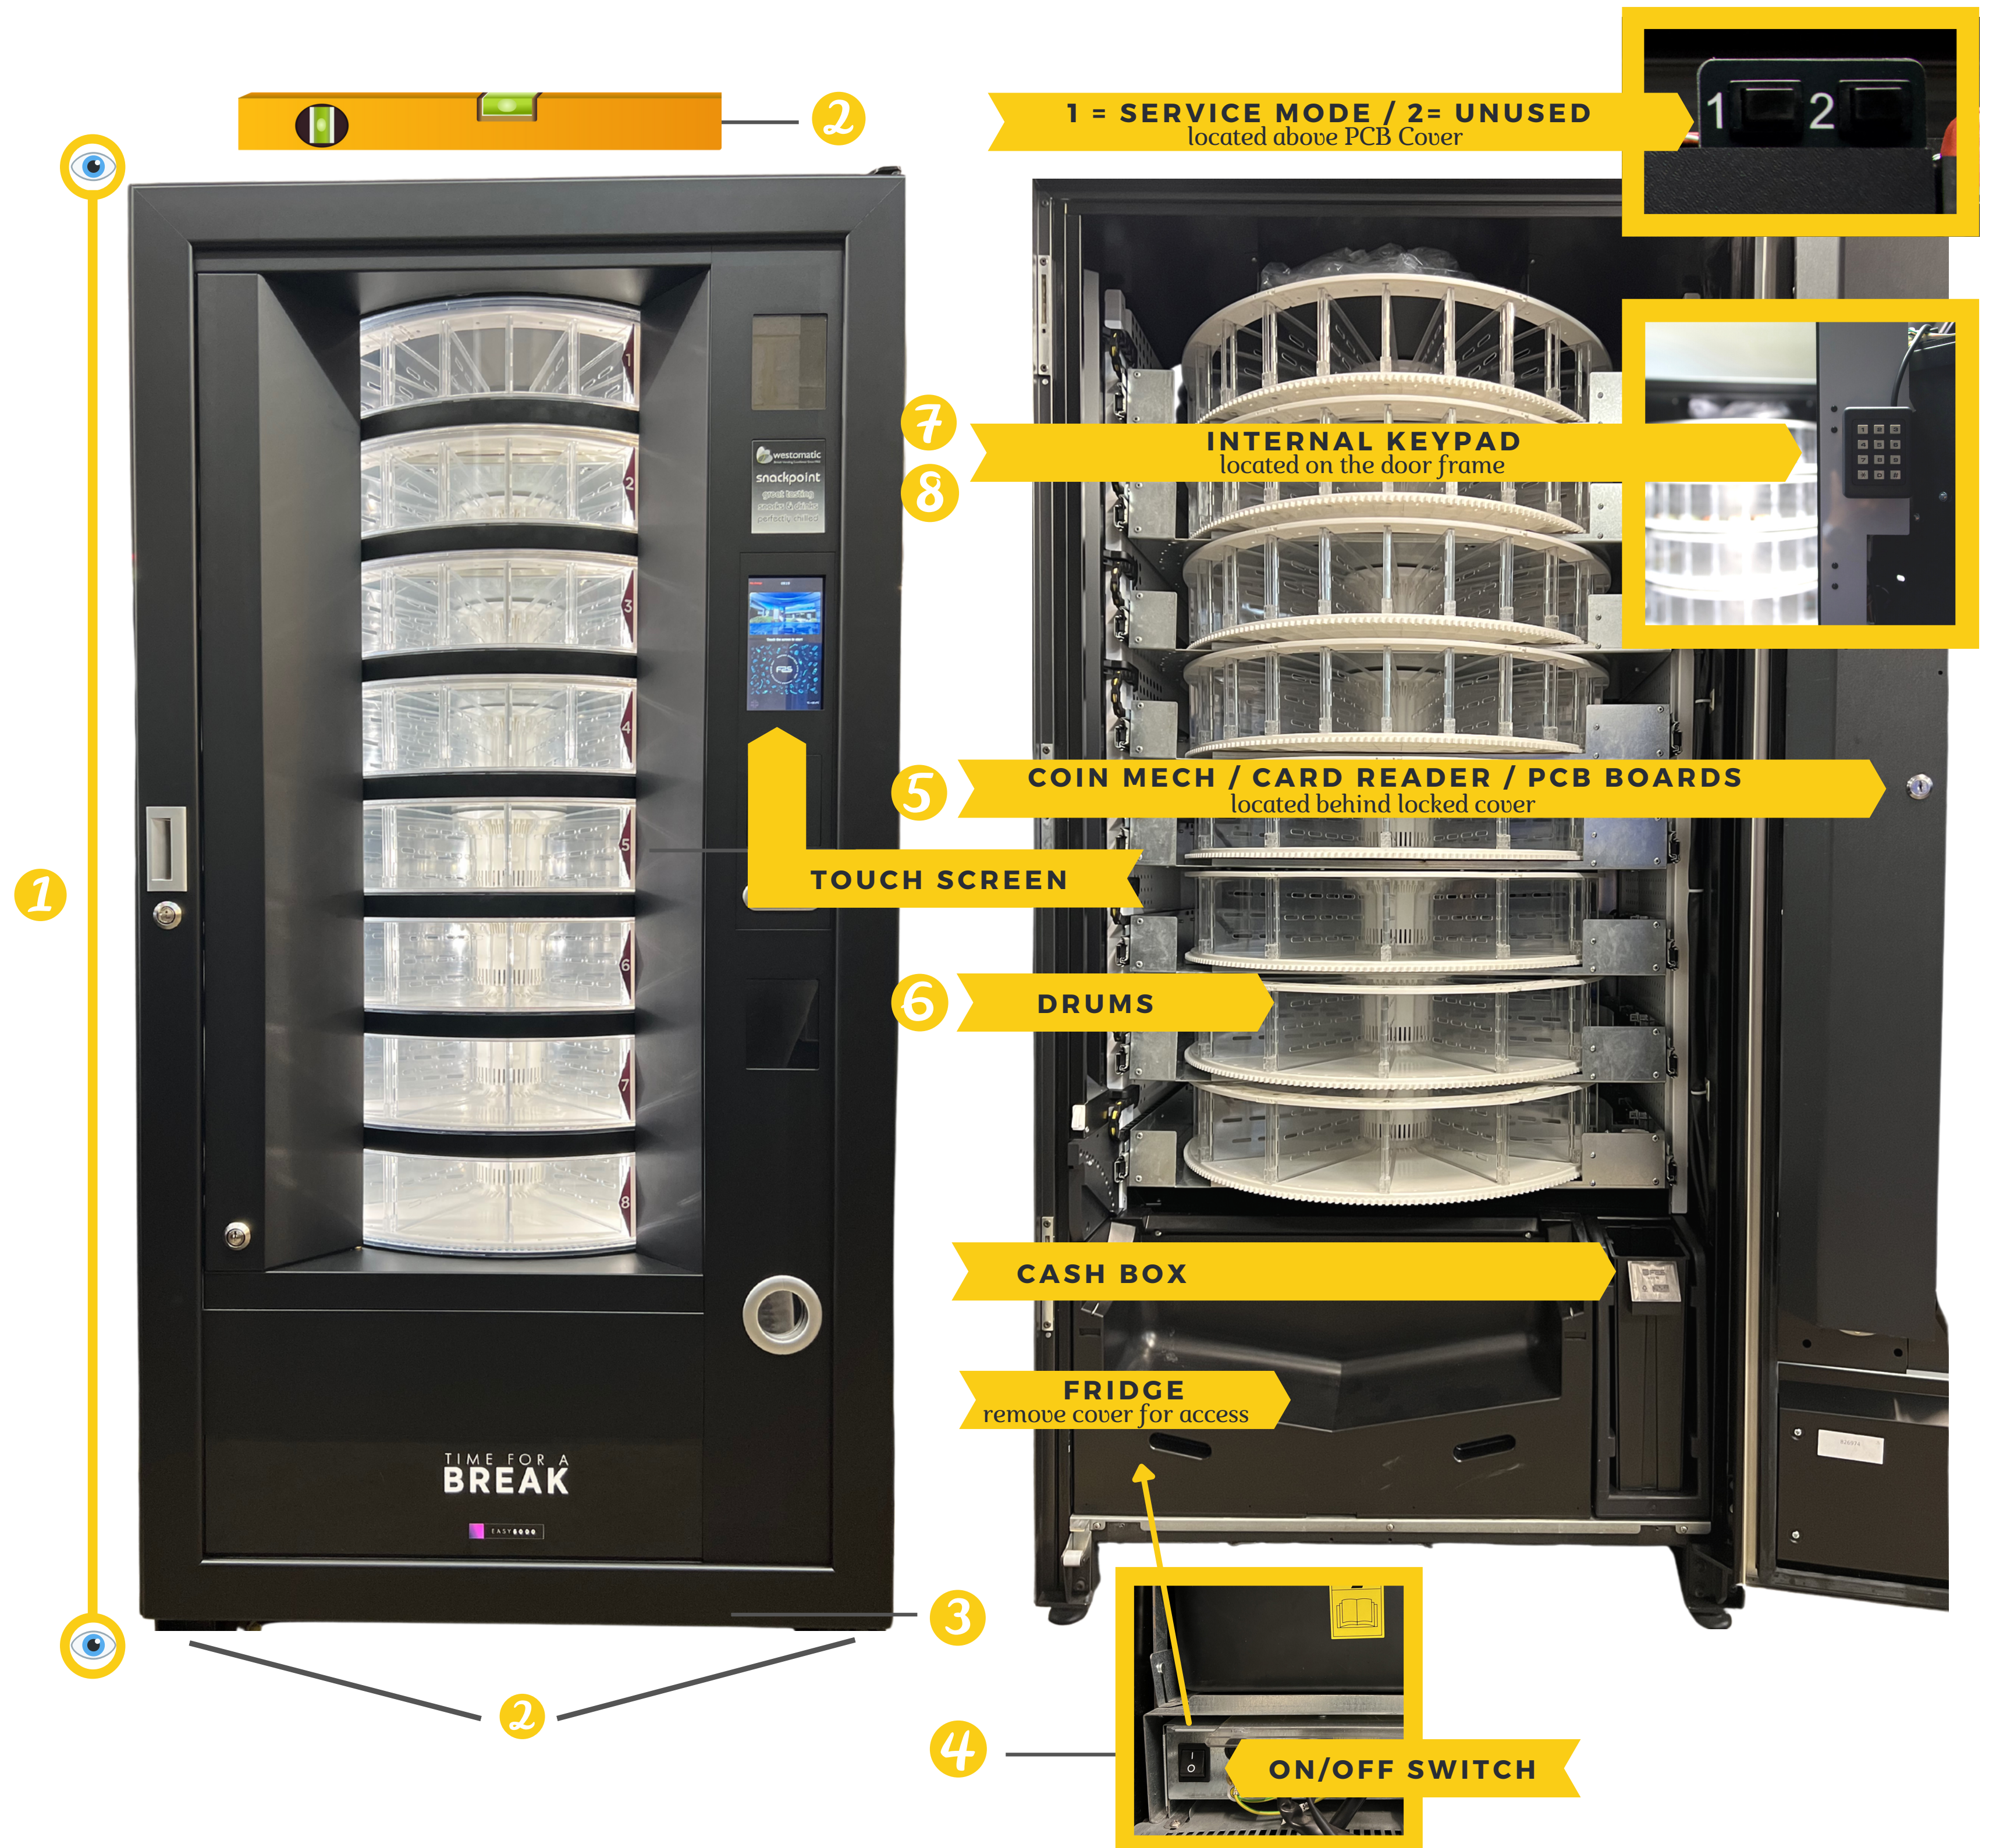

CLEANING

WEEKLY:

- Hoover Drums to remove any crumbs/debris
- Wipe clean thoroughly each drum
- For a deeper clean, drums can be removed and are dishwasher safe.

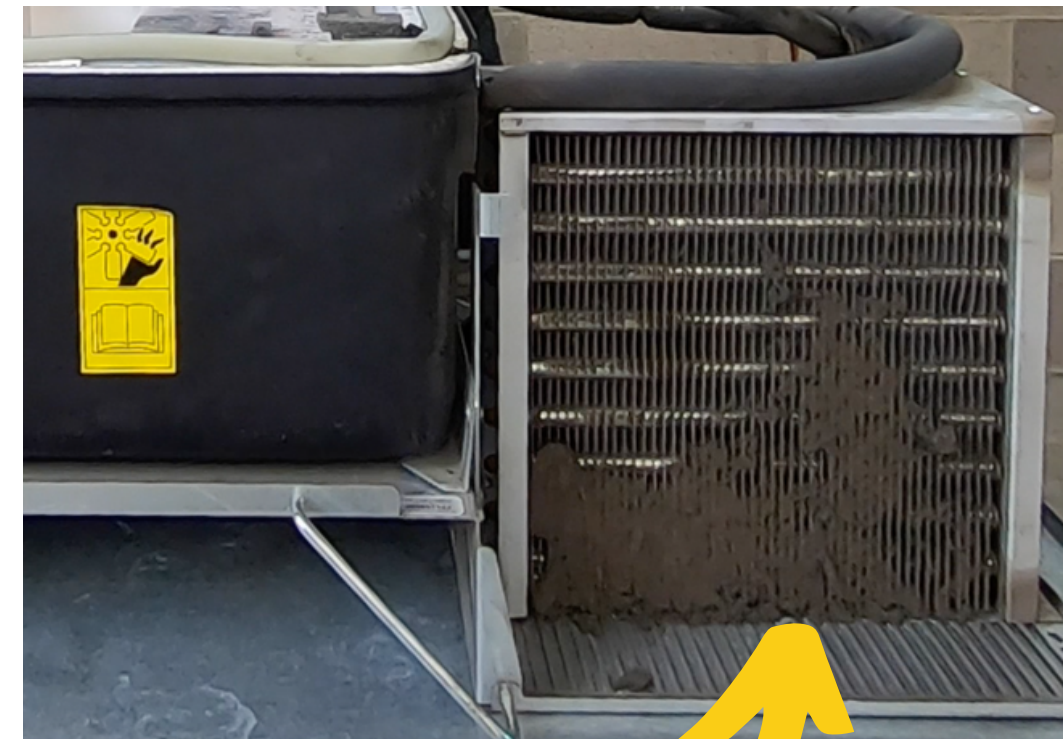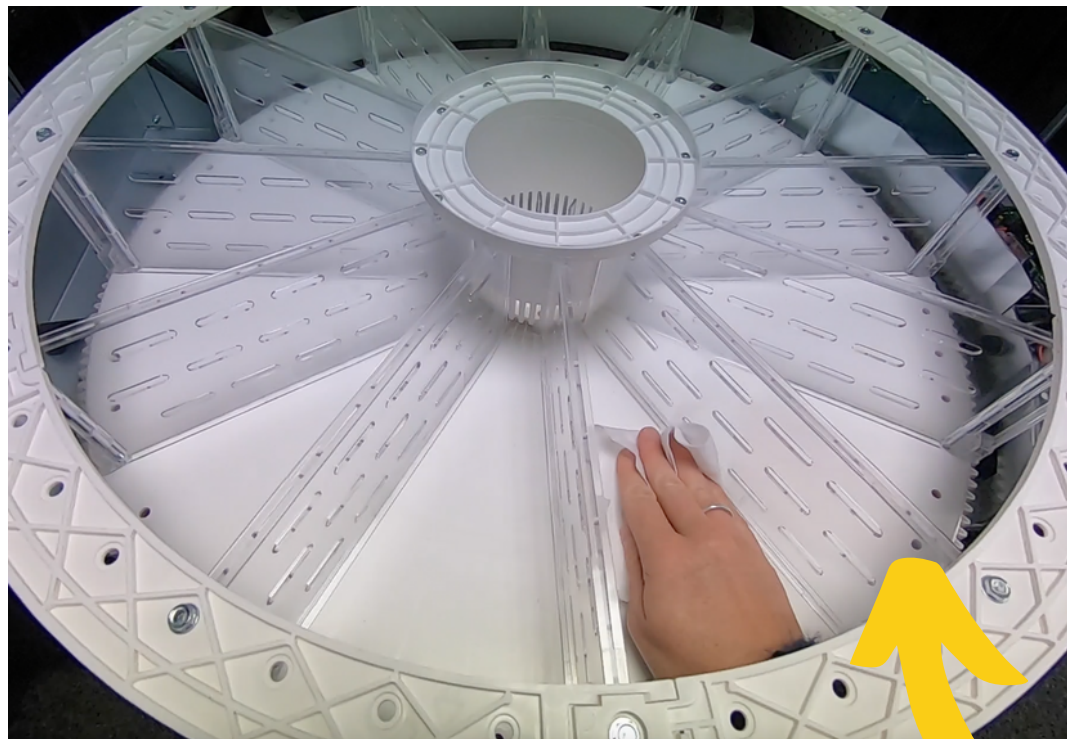

EVERY 6 - 12 MONTHS:

CLEAN ME!

- FRIDGE - disconnect and remove, hoover ventilation and condenser grille, test temperature probes, check fans move smoothly and check cut out temperature.
- MACHINE TEST - TEST DRUMS/DOORS - Check all delivery doors and drums are running smoothly, deep clean drums, and check entire machine is free of rubbish/food/debris.
- COIN MECH - Clean/test/refill/check reject mechanism




SCAN ME

FOR CLEANING,
FILLING &
MAINTENANCE GUIDES

FILLING

NORMAL FILLING:

1. Either open the door, pull each drum out and fill from the top - being careful that each product fits within the compartment. The drums reloaded must be confirmed by pressing the drum number on the internal keypad - complete full revolution.
2. Or using the internal keypad with the door open, select the drum number and fill as it rotates.

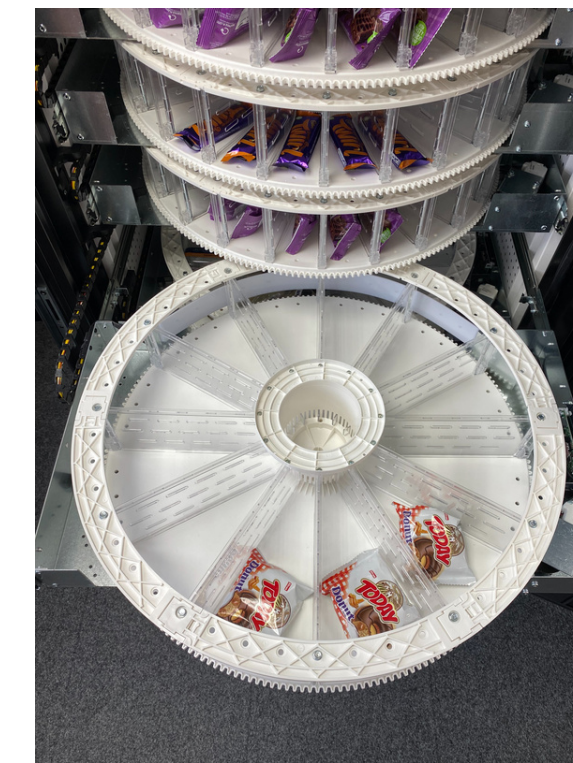

PRODUCT SELECTION

USING THE TOUCH SCREEN:

1. Touch the screen any where to bring up selection screen.
2. Press and hold the round blue button to rotate the drums for browsing.
3. When you have identified the product, use the numbers to make your selection.
4. Confirm selection by pressing the blue tick. ✓



User Guide

5 SIMPLE STEPS

1

USE THE TOUCHSCREEN AND
BLUE BUTTON TO BROWSE

2

ENSURE CHOSEN SELECTION
IS NEXT TO ARROW

3

SELLING PRICE IS DISPLAYED
ON PRICE DISPLAY

4

IF REQUIRED - ENTER
PAYMENT - EITHER VIA
CASH / CARD

5

PRESS BLUE TICK BUTTON -
DELIVERY DOOR WILL OPEN
TO RETRIEVE PRODUCT

TROUBLESHOOTING GUIDE

DELIVERY DOOR WILL NOT OPEN - ERROR CODE 1

- Open machine and check for any obstructions in the drum.
 - Check there is no debris on the motors.
- If the issue persists, the door motor may need replacing.

HEALTH CONTROL - ERROR CODE 30

- With the door open press the Error Reset screen, machine will reset .
- If the issue persists - consult an engineer regarding fridge fixes .

ERROR CODE 10

- Internal (Cabinet) temperature probe defective.
- Call-out required by engineer to test and fit a new probe.

ERROR CODE 11

- Evaporator probe defective.
- Call-out required by engineer to test and fit a new probe.

NO CHANGE DISPENSED

- Check the coin mech is full - clean & fill if necessary.

MACHINE WON'T DELIVER PRODUCTS

- Check to see if sell by dates are active for products.
- Check the Health Control - machine won't deliver if fridge is too warm.

PRODUCTS EXHAUSTED

- Occurs if products have sold out or drums not reset properly after loading.
- Open door, press the drum number and complete a full revolution, close door, drum is now reset.

PART NUMBER: 1011015

CONTACT



Units 7-8 Block 4 Forde
Court, Forde Road,
Brunel Industrial
Estate, Newton Abbot,
Devon, TQ12 4BT

www.westomatic.com

TOUGH **EASY6000**

FRESH FOOD
PERFECTLY CHILLED



+44 (0)1626 323100



support@westomatic.com



www.westomatic.com